


How to Cut Pockets in Adhesive-Backed Tool Foam with a Hobby Knife


Arrange your tools on the thicker sheet of foam.




Use a marker to trace the tools.
We used a liquid chalk marker as shown,
but neon dry-erase markers also work well.

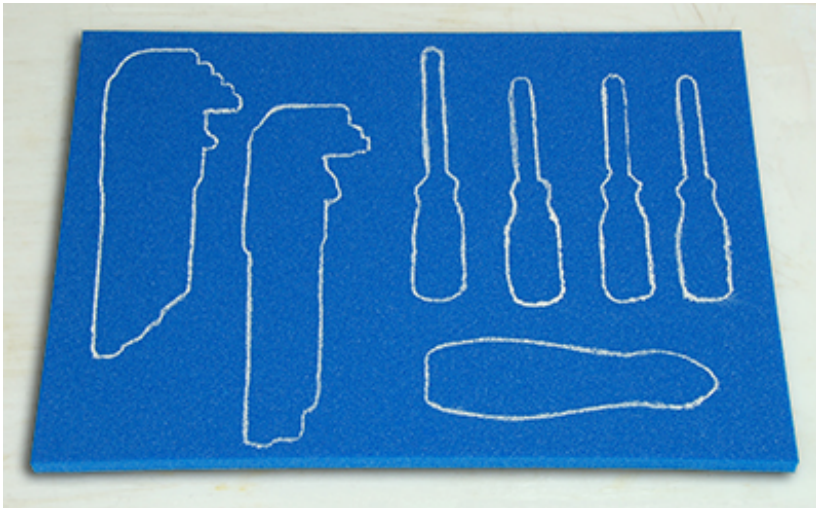

Cut through the foam and paper backing with a hobby knife.

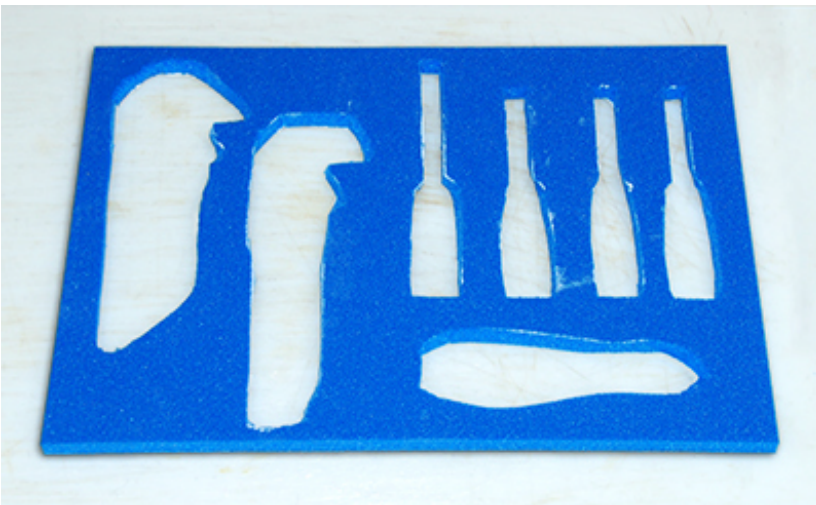

Add finger pockets, if desired.

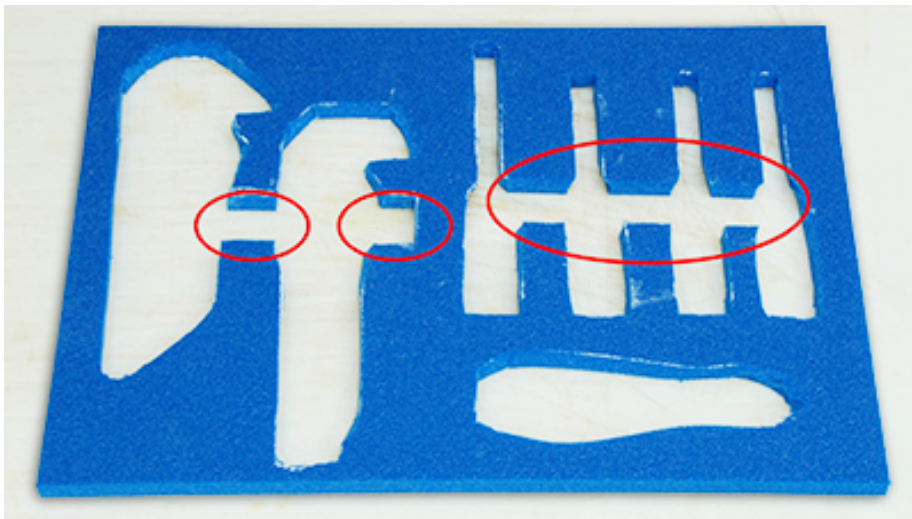


Test fit the tools.




Remove paper backing from foam.



Press the layers together firmly.

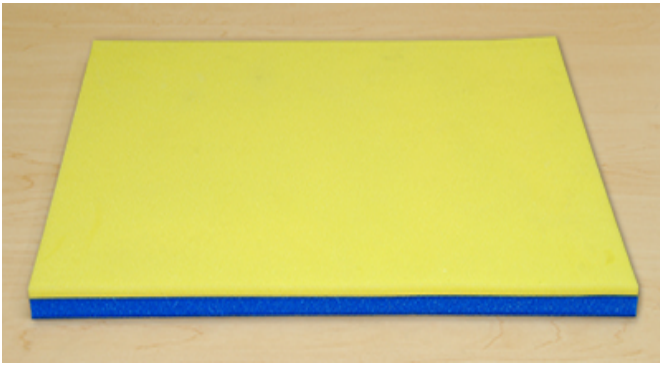

The finished result:

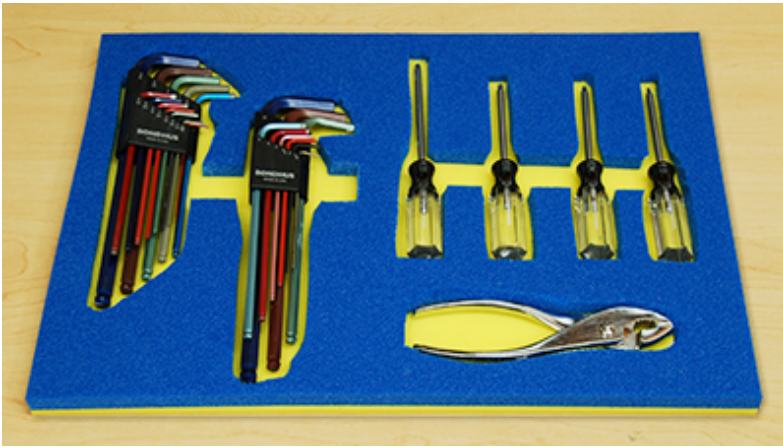

Helpful Hints

The adhesive bond will improve over time. For best results:

- Assemble when foam is at room temperature or warmer.
- Stack weight on foam for 30 minutes for best initial bond.
- Remove any dust or oil before assembly using paint thinner, acetone, or an all-purpose cleaner.