



PRINTING INSTRUCTIONS

We recommend printing at full-scale to check the fit with your tools before ordering.

Option 1: Print this page full-scale on a large-format printer (D-Size, 34 inches X 22 inches).

Option 2: Print page 2 - 5 on 8-1/2 X 11 inch paper and assemble.

Thank You!

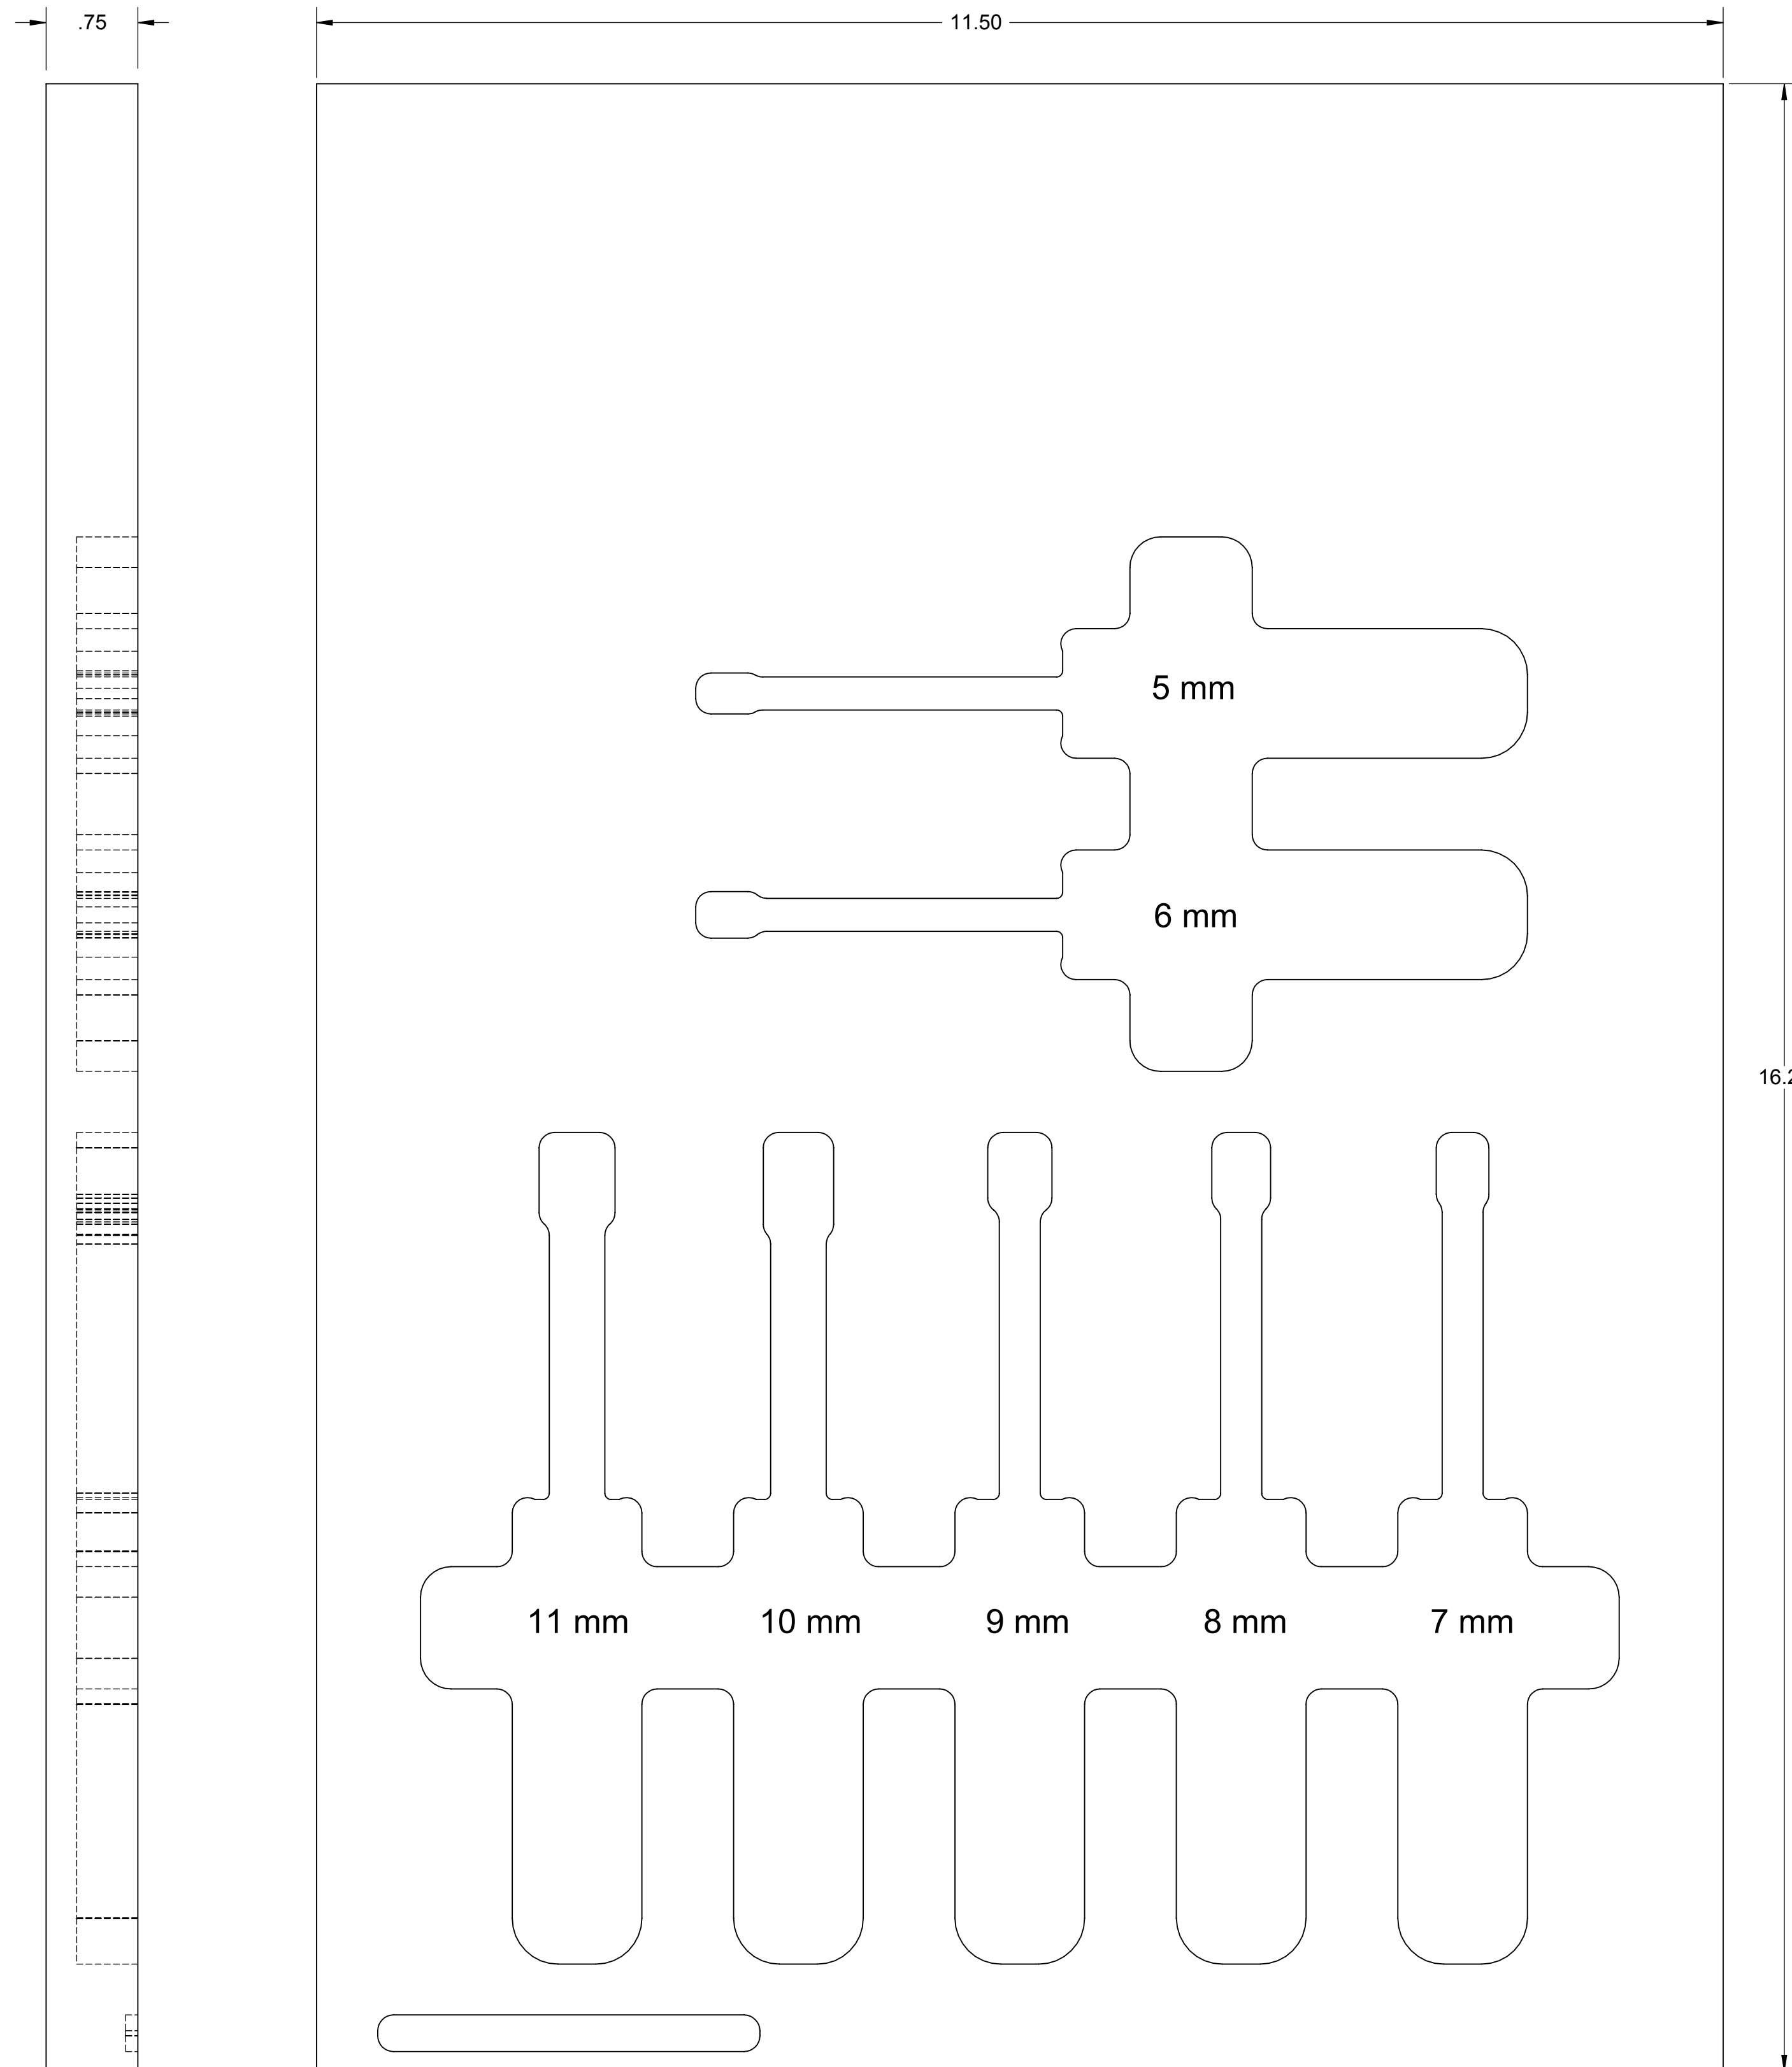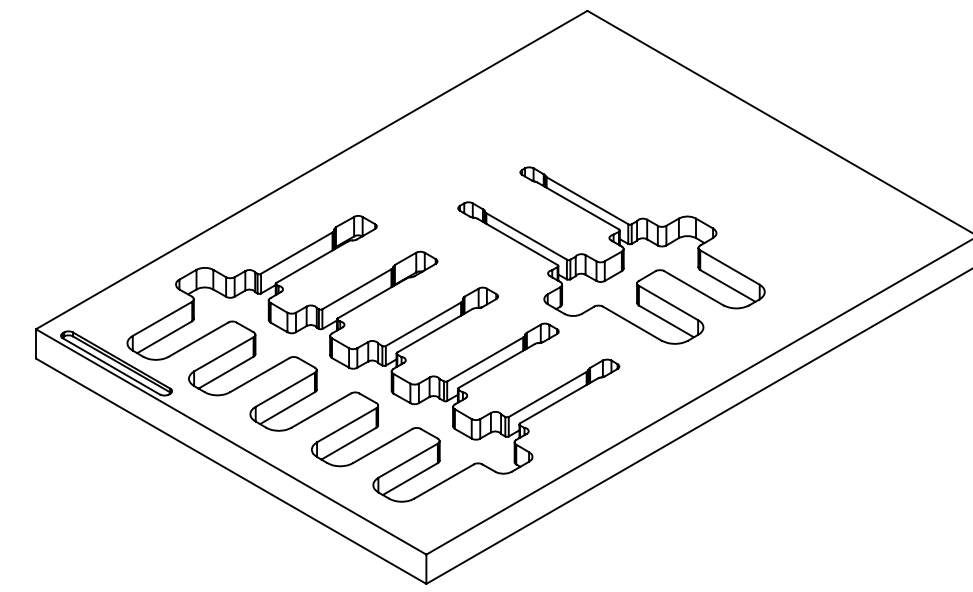

THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION. Copyright 2013 FoamFit Tools


4.00 IN

PART NUMBER **F1S-00590**


CRAFTSMAN NUTDRIVERS

1.00 IN

PAGE KEY



1.00 IN

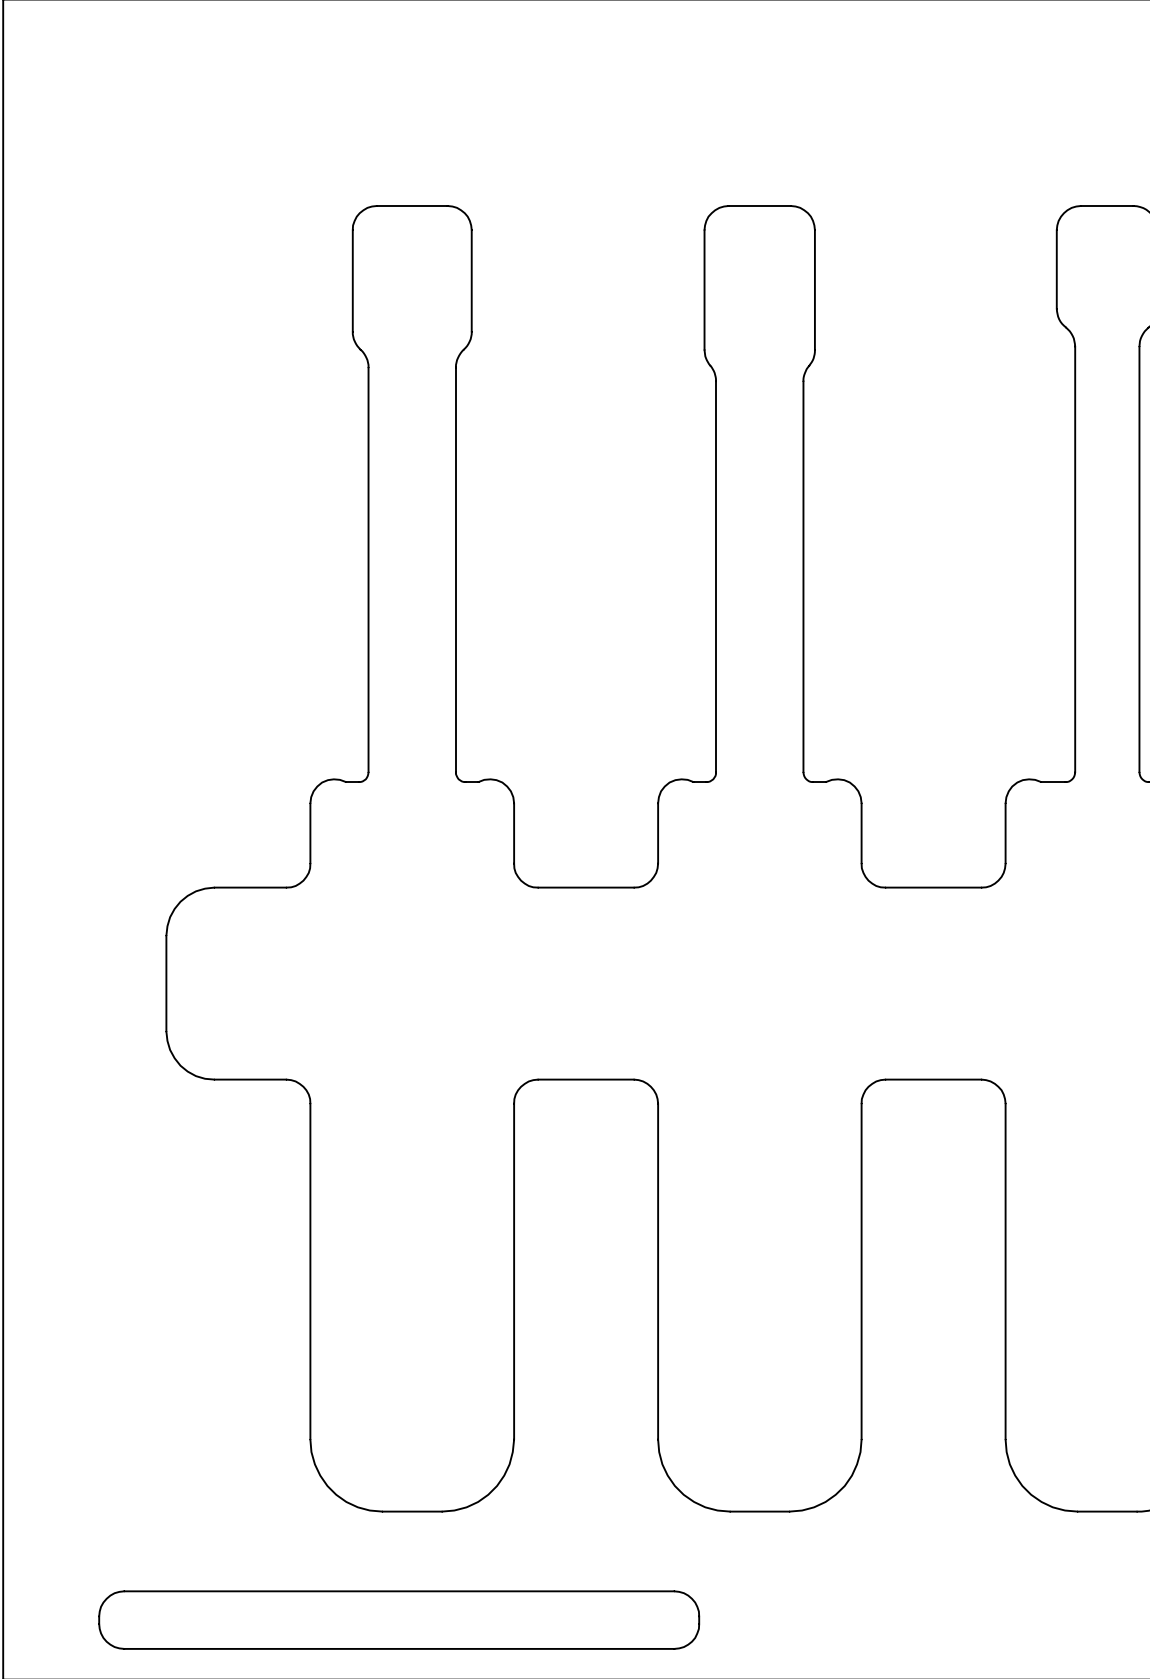

Print on Letter at 100%

DATE CREATED


20 JUL 2013

PART NUMBER


F1S-00590

← 1.00 IN →

PAGE KEY



1.00
IN

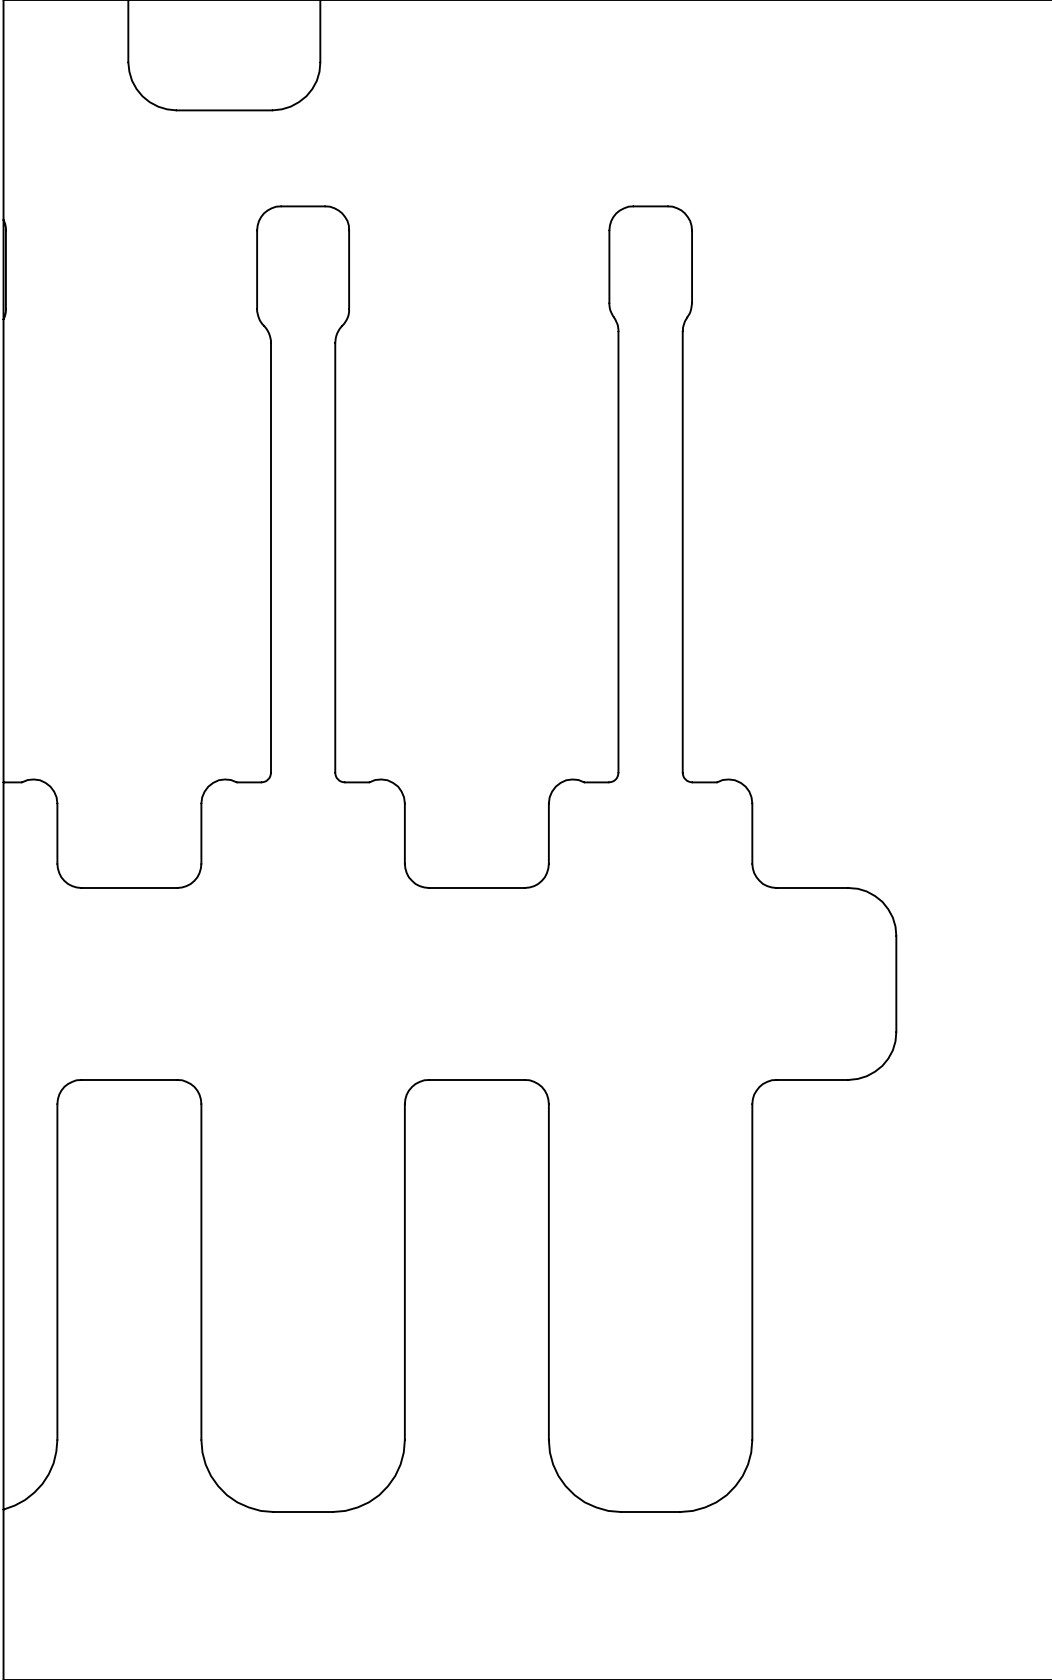

Print on Letter at 100%

DATE CREATED

20 JUL 2013

PART NUMBER


F1S-00590

1.00 IN

PAGE KEY

X									

1.00
IN




Print on Letter at 100%

PART NUMBER **F1S-00590**
DATE CREATED **20 JUL 2013**


1.00 IN

PAGE KEY



1.00
IN

Print on Letter at 100%

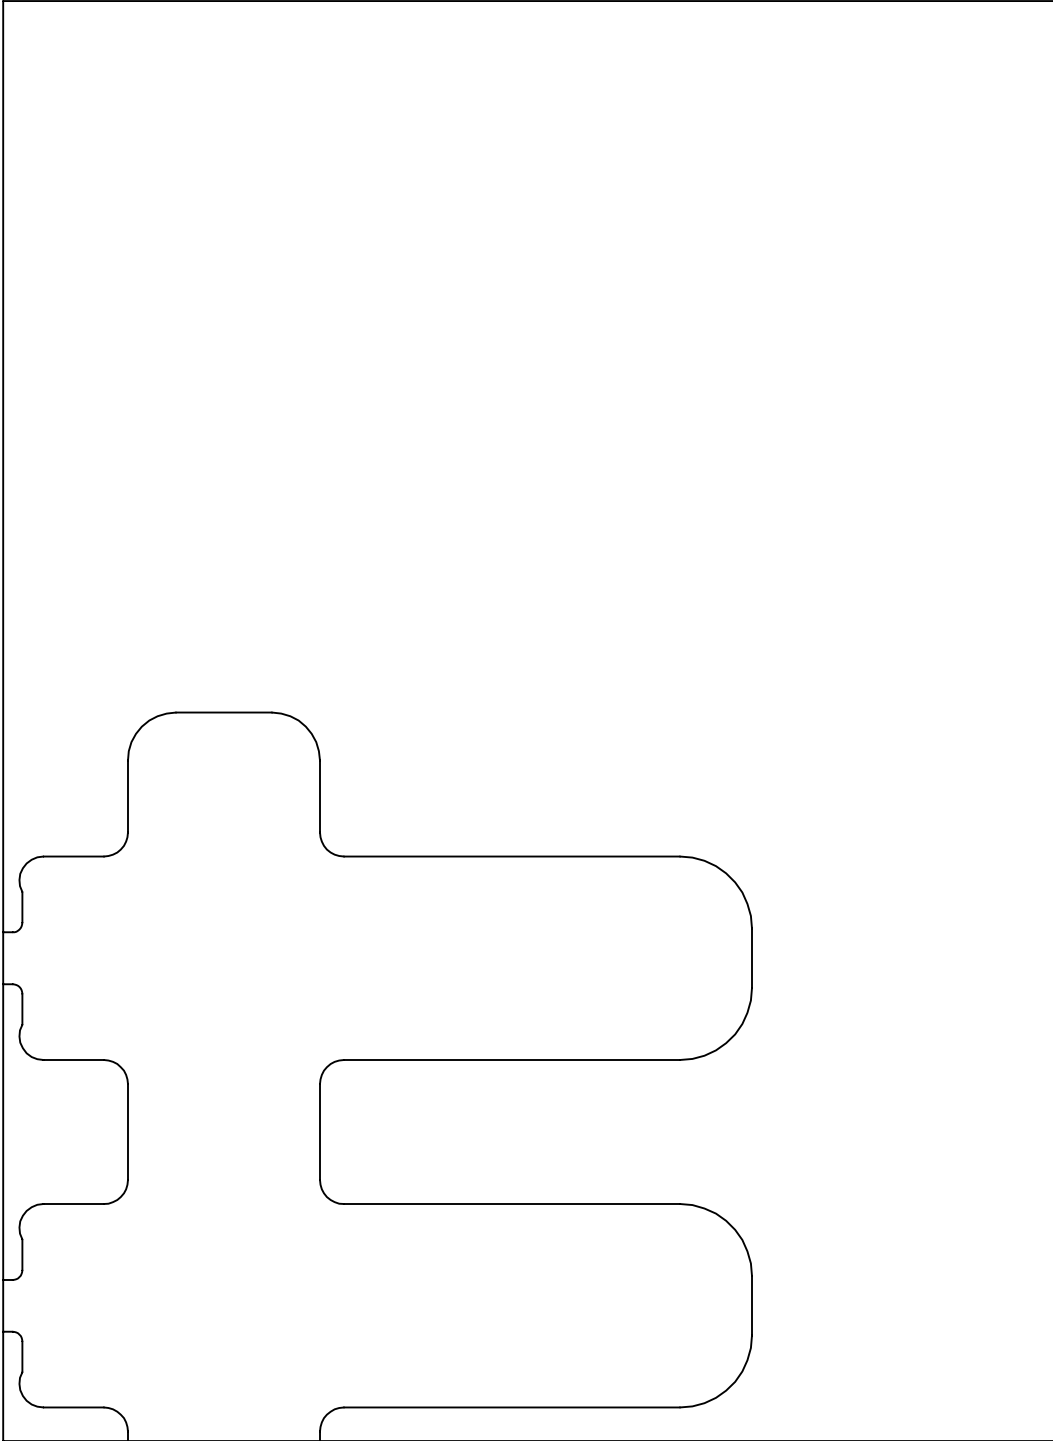

DATE CREATED

20 JUL 2013

PART NUMBER

F1S-00590