

PRINTING INSTRUCTIONS



We recommend printing at full-scale to check the fit with your tools before ordering.

Option 1: Print this page full-scale on a large-format printer (E-Size, 44 inches X 34 inches).


Option 2: Print page 2 - 7 on 8-1/2 X 11 inch paper and assemble.

Thank You!

THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION.
Copyright 2025 FoamFit Tools

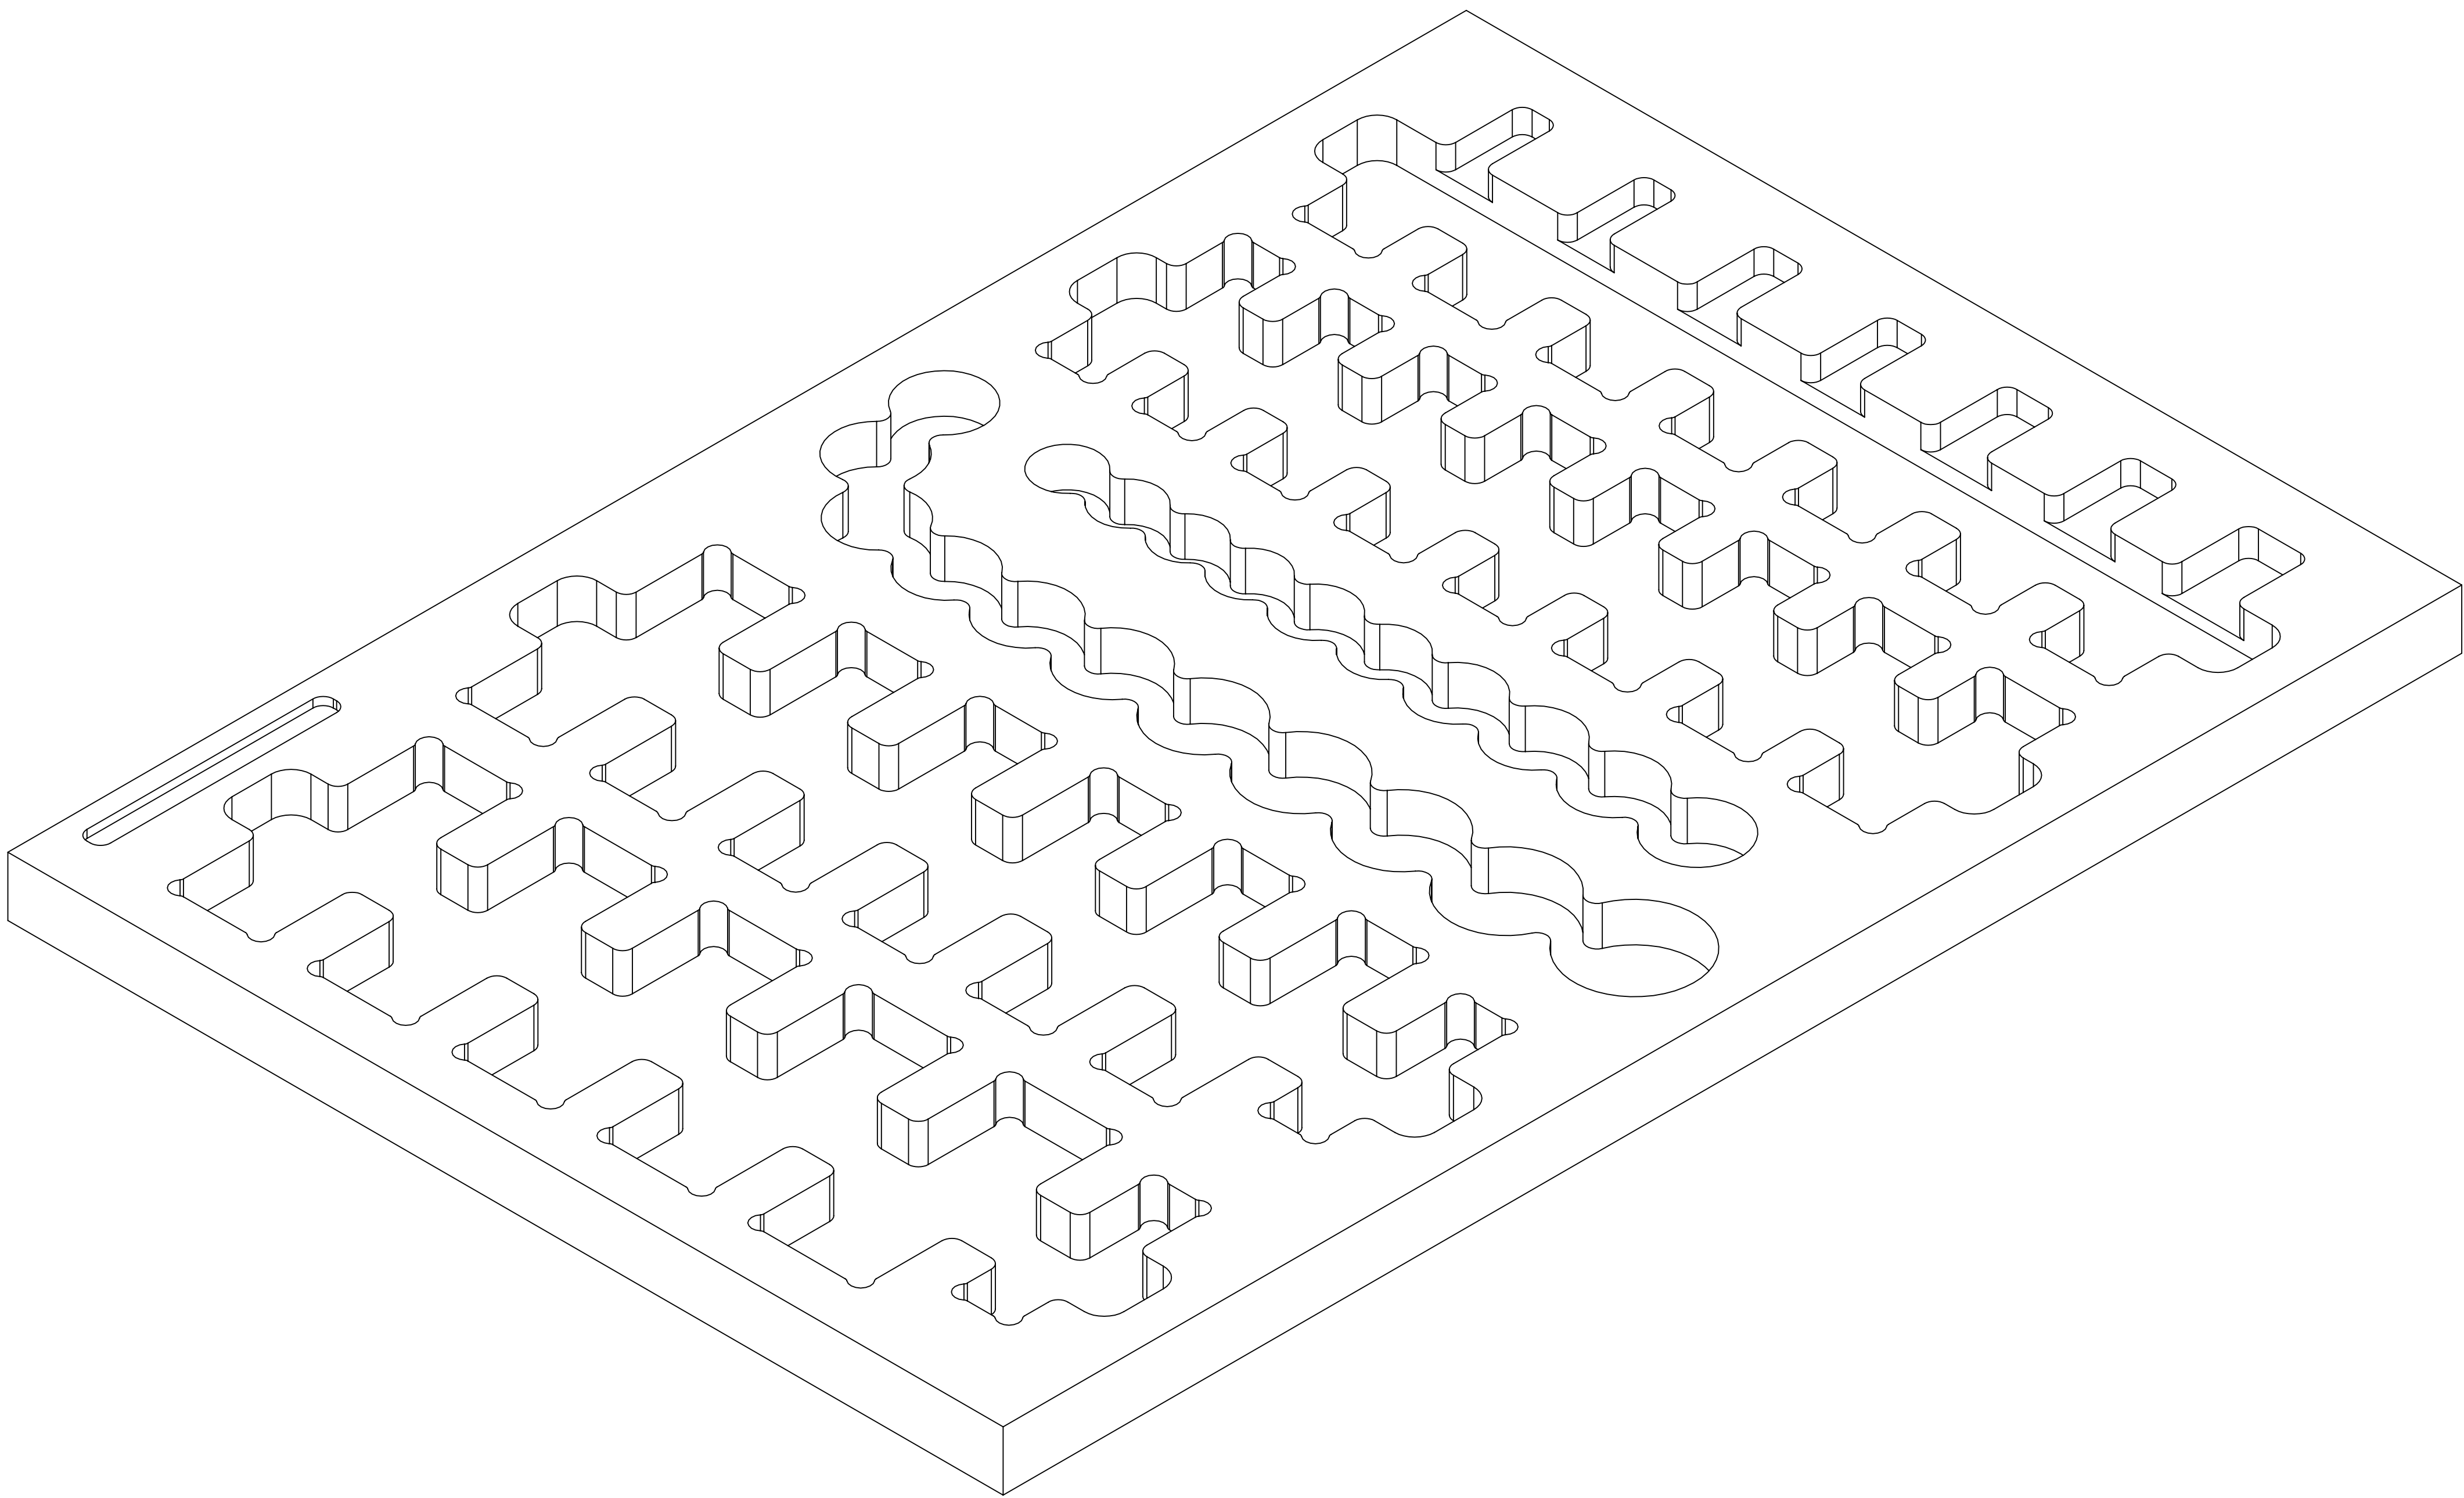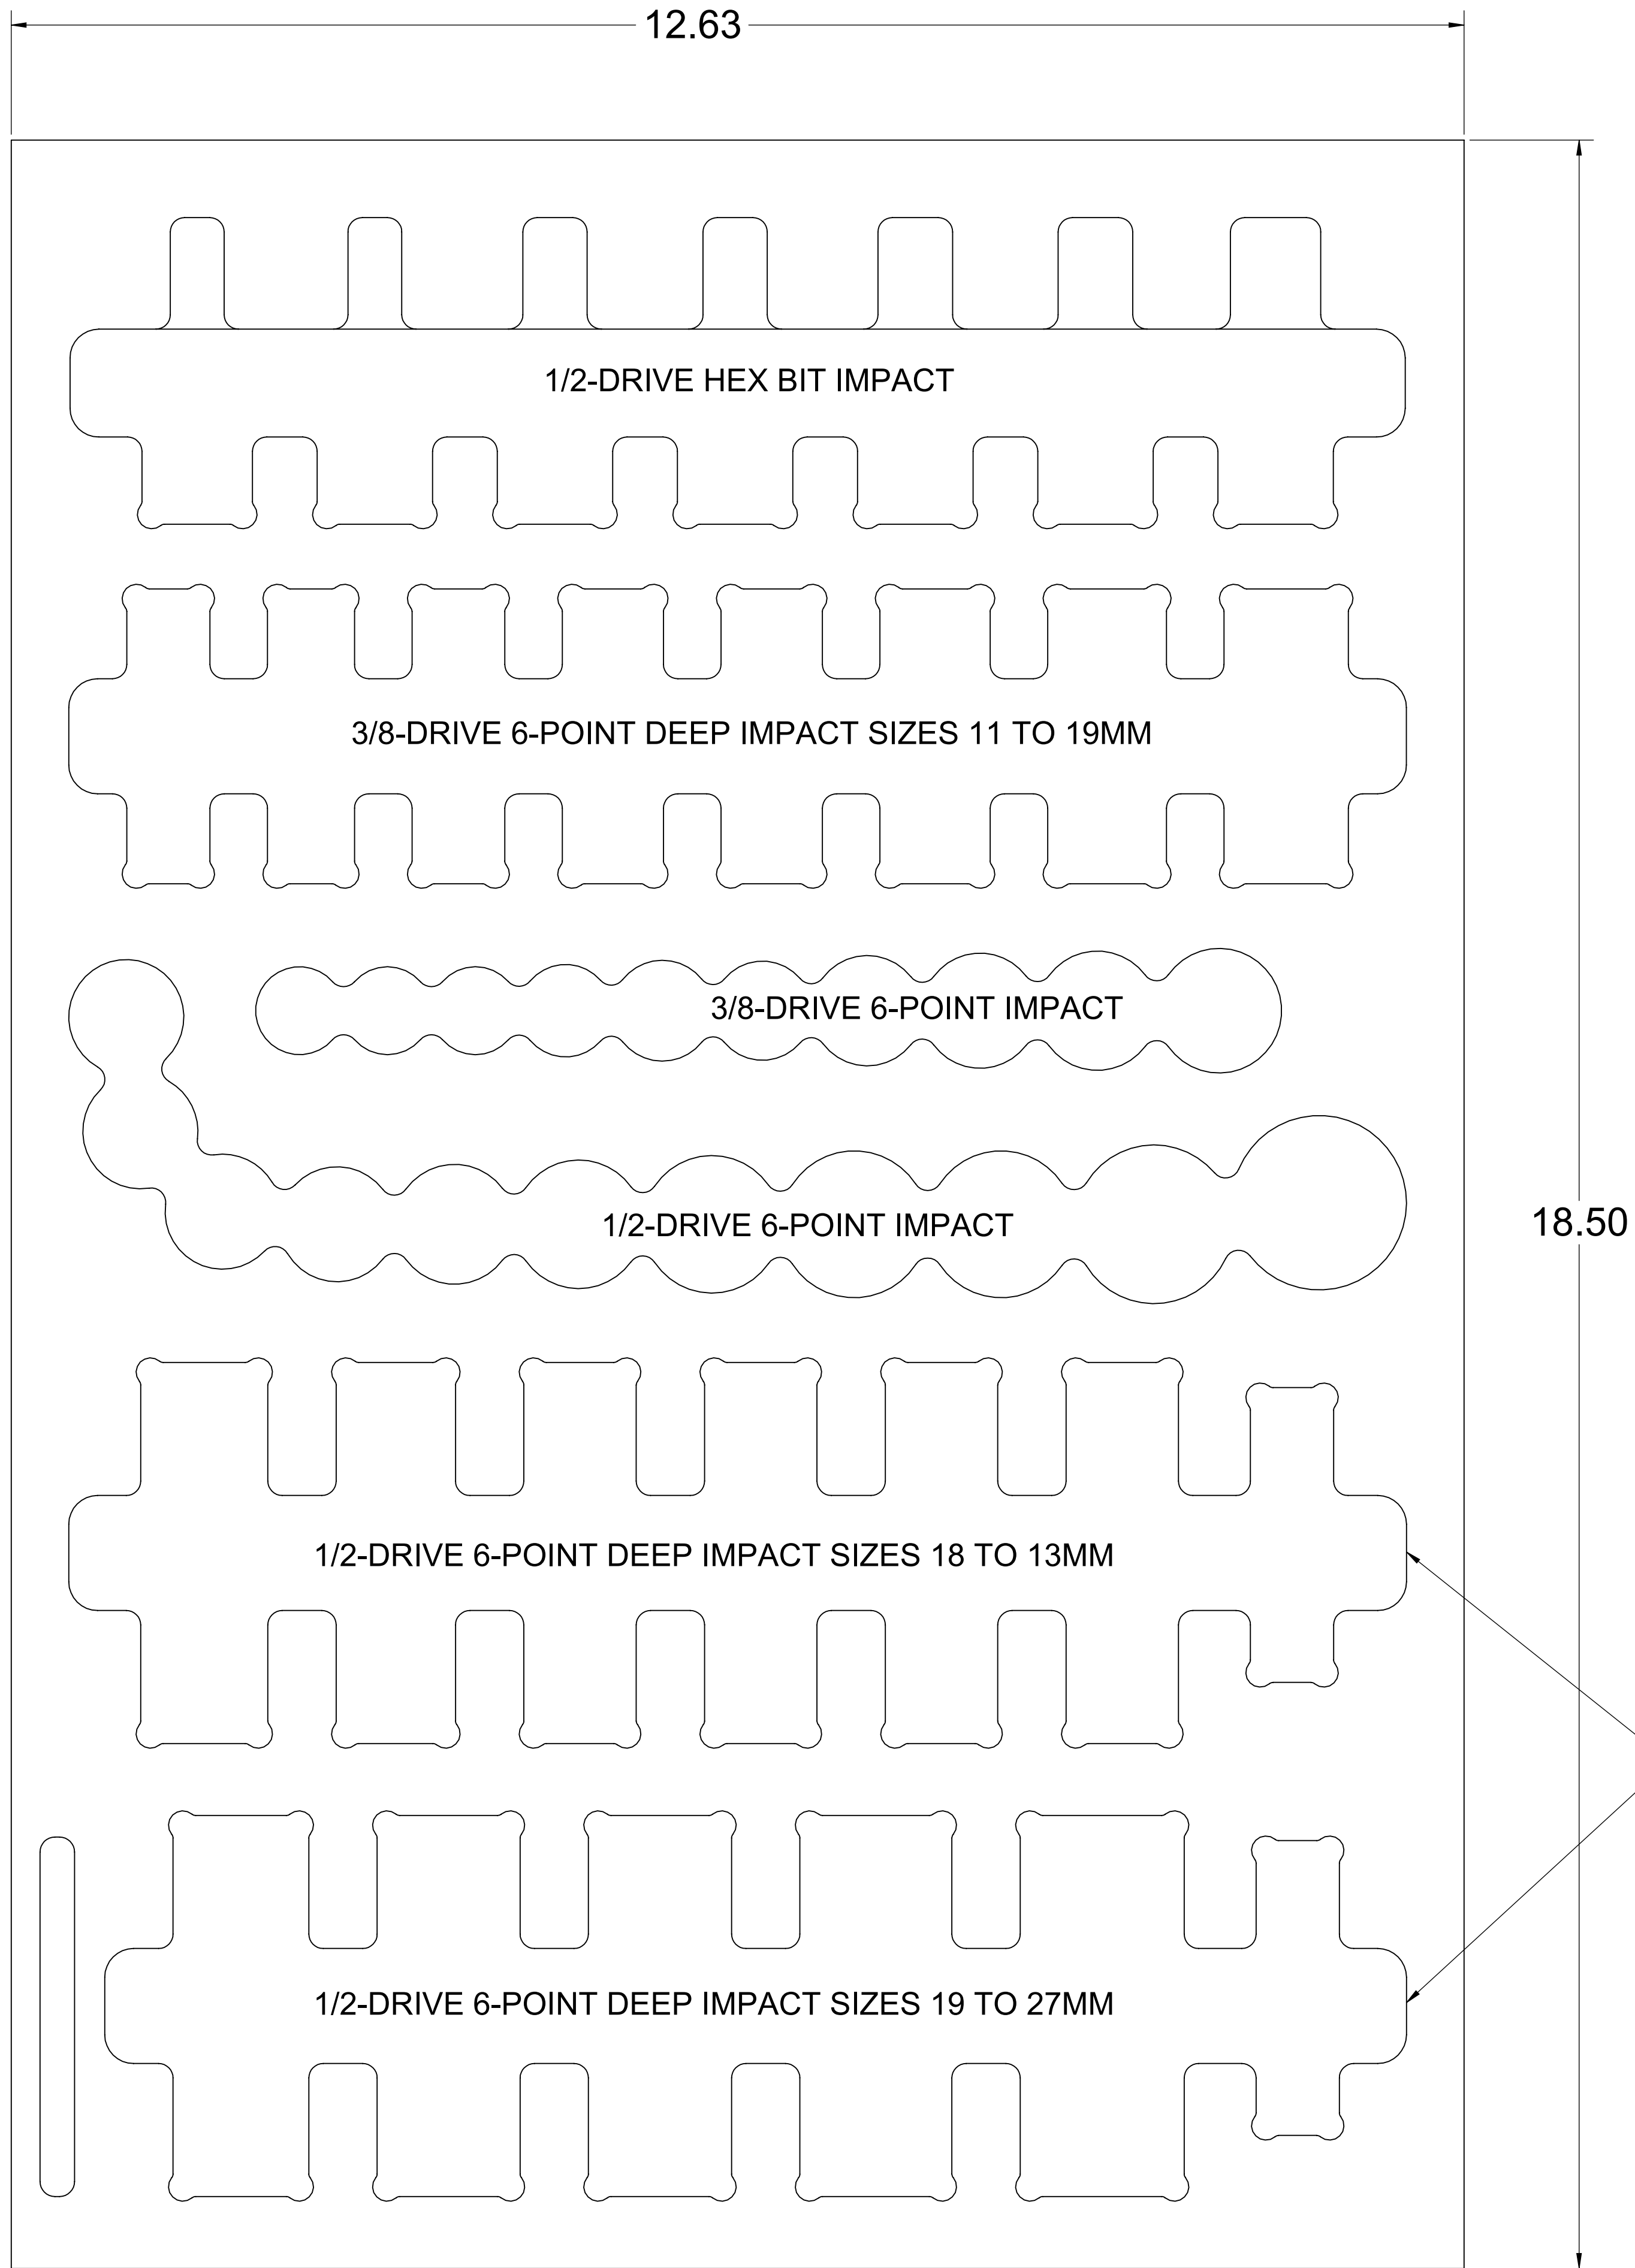

METRIC SOCKETS

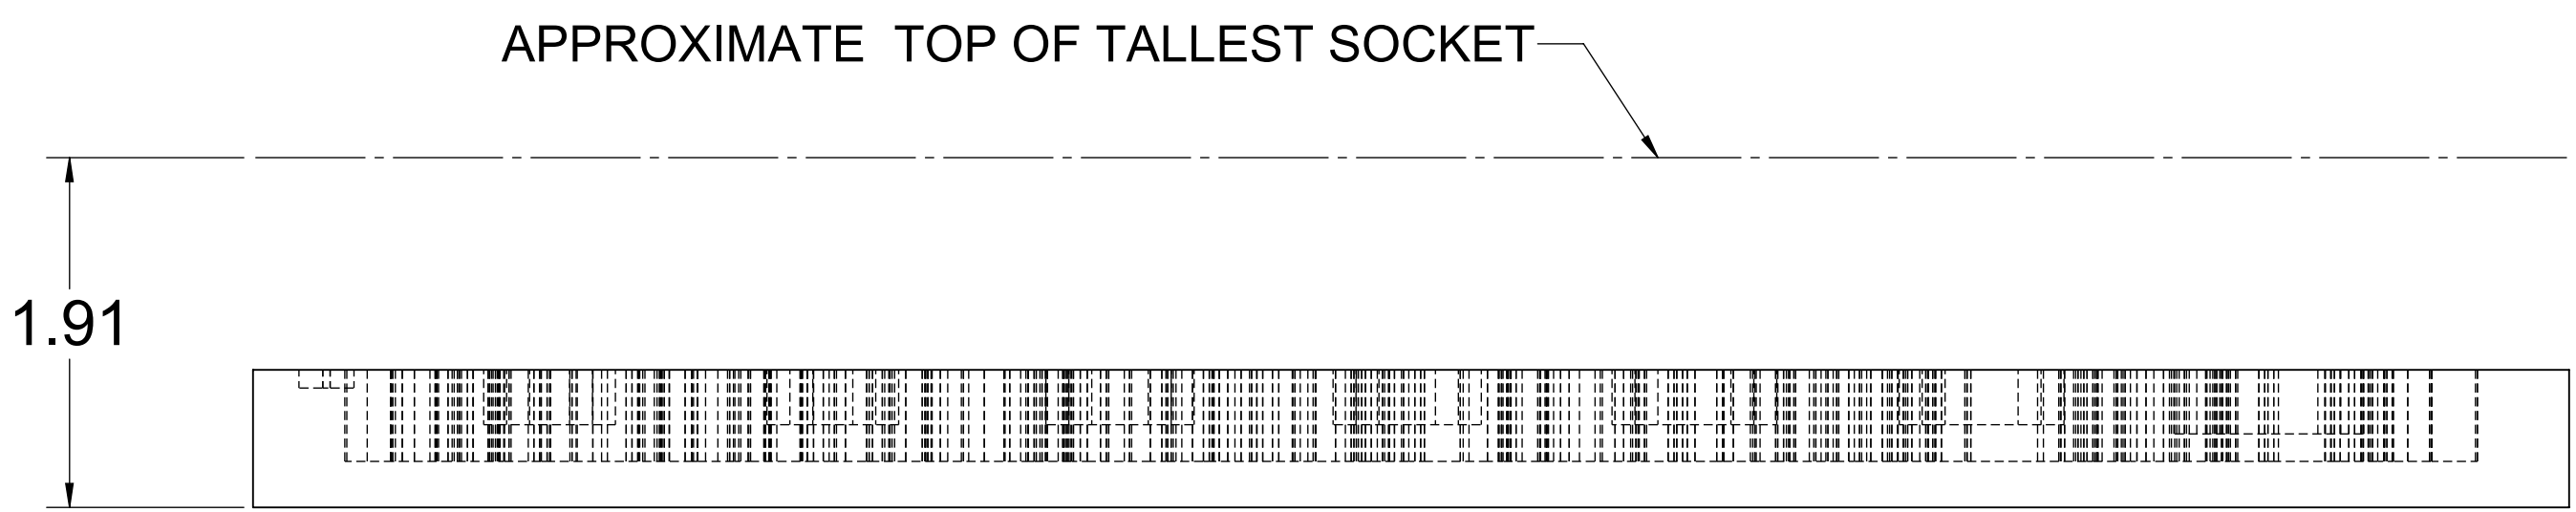

CAUTION
SUGGESTED DRAWER HEIGHT
2.13 MIN

PART NUMBER
F-05938-R

1.00 IN

PAGE KEY

X									

1.00
IN

Print on Letter at 100%

DATE CREATED


19 JAN 2025

PART NUMBER

F-05938-R

1.00 IN

PAGE KEY



1.00
IN

Print on Letter at 100%

DATE CREATED

19 JAN 2025

PART NUMBER


F-05938-R

Print on Letter at 100%

1.00 IN

1.00
IN

PAGE KEY



DATE CREATED

19 JAN 2025

PART NUMBER

F-05938-R



19 JAN 2025

F-05938-R

1.00
IN

1.00 IN


FoamFit Tools

Print on Letter at 100%

1.00
IN

1.00 IN

PAGE KEY

X									

DATE CREATED

19 JAN 2025

PART NUMBER

F-05938-R



Print on Letter at 100%

1.00
IN

1.00 IN

PAGE KEY

X									

DATE CREATED

19 JAN 2025

PART NUMBER

F-05938-R

