


PRINTING INSTRUCTIONS

We recommend printing at full-scale to check the fit with your tools before ordering.

Option 1: Print this page full-scale on a large-format printer (D-Size, 34 inches X 22 inches).


Option 2: Print page 2 - 9 on 8-1/2 X 11 inch paper and assemble.

Thank You!

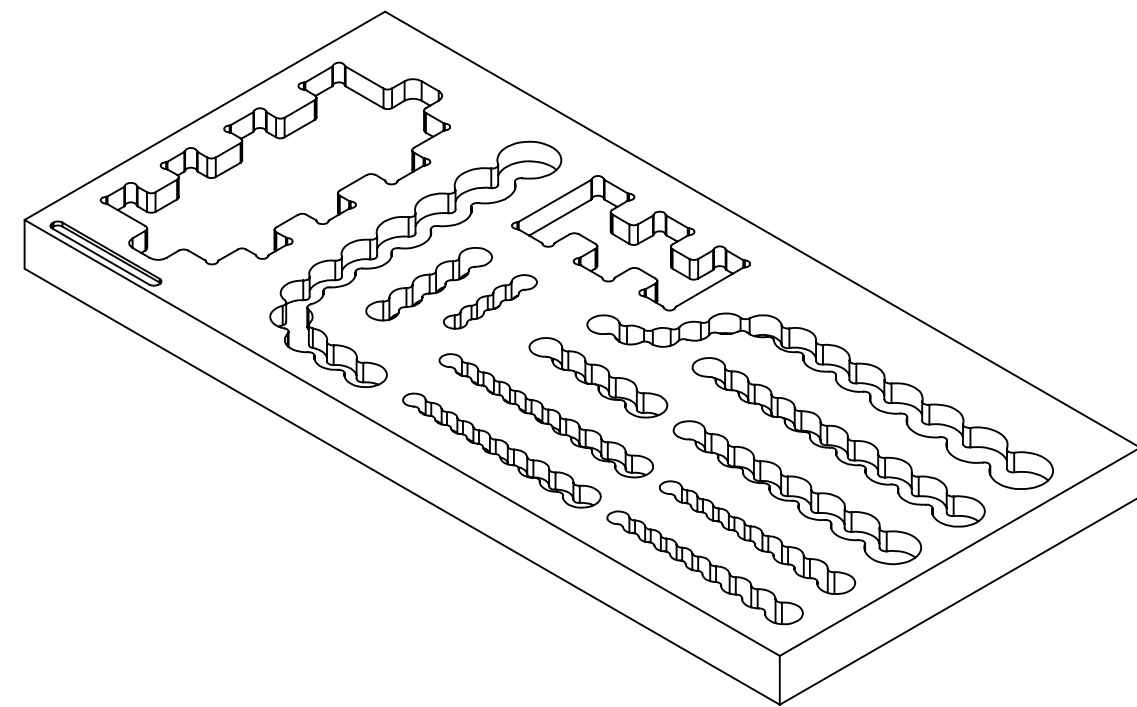


5.00 IN

THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION. Copyright 2013 FoamFit Tools

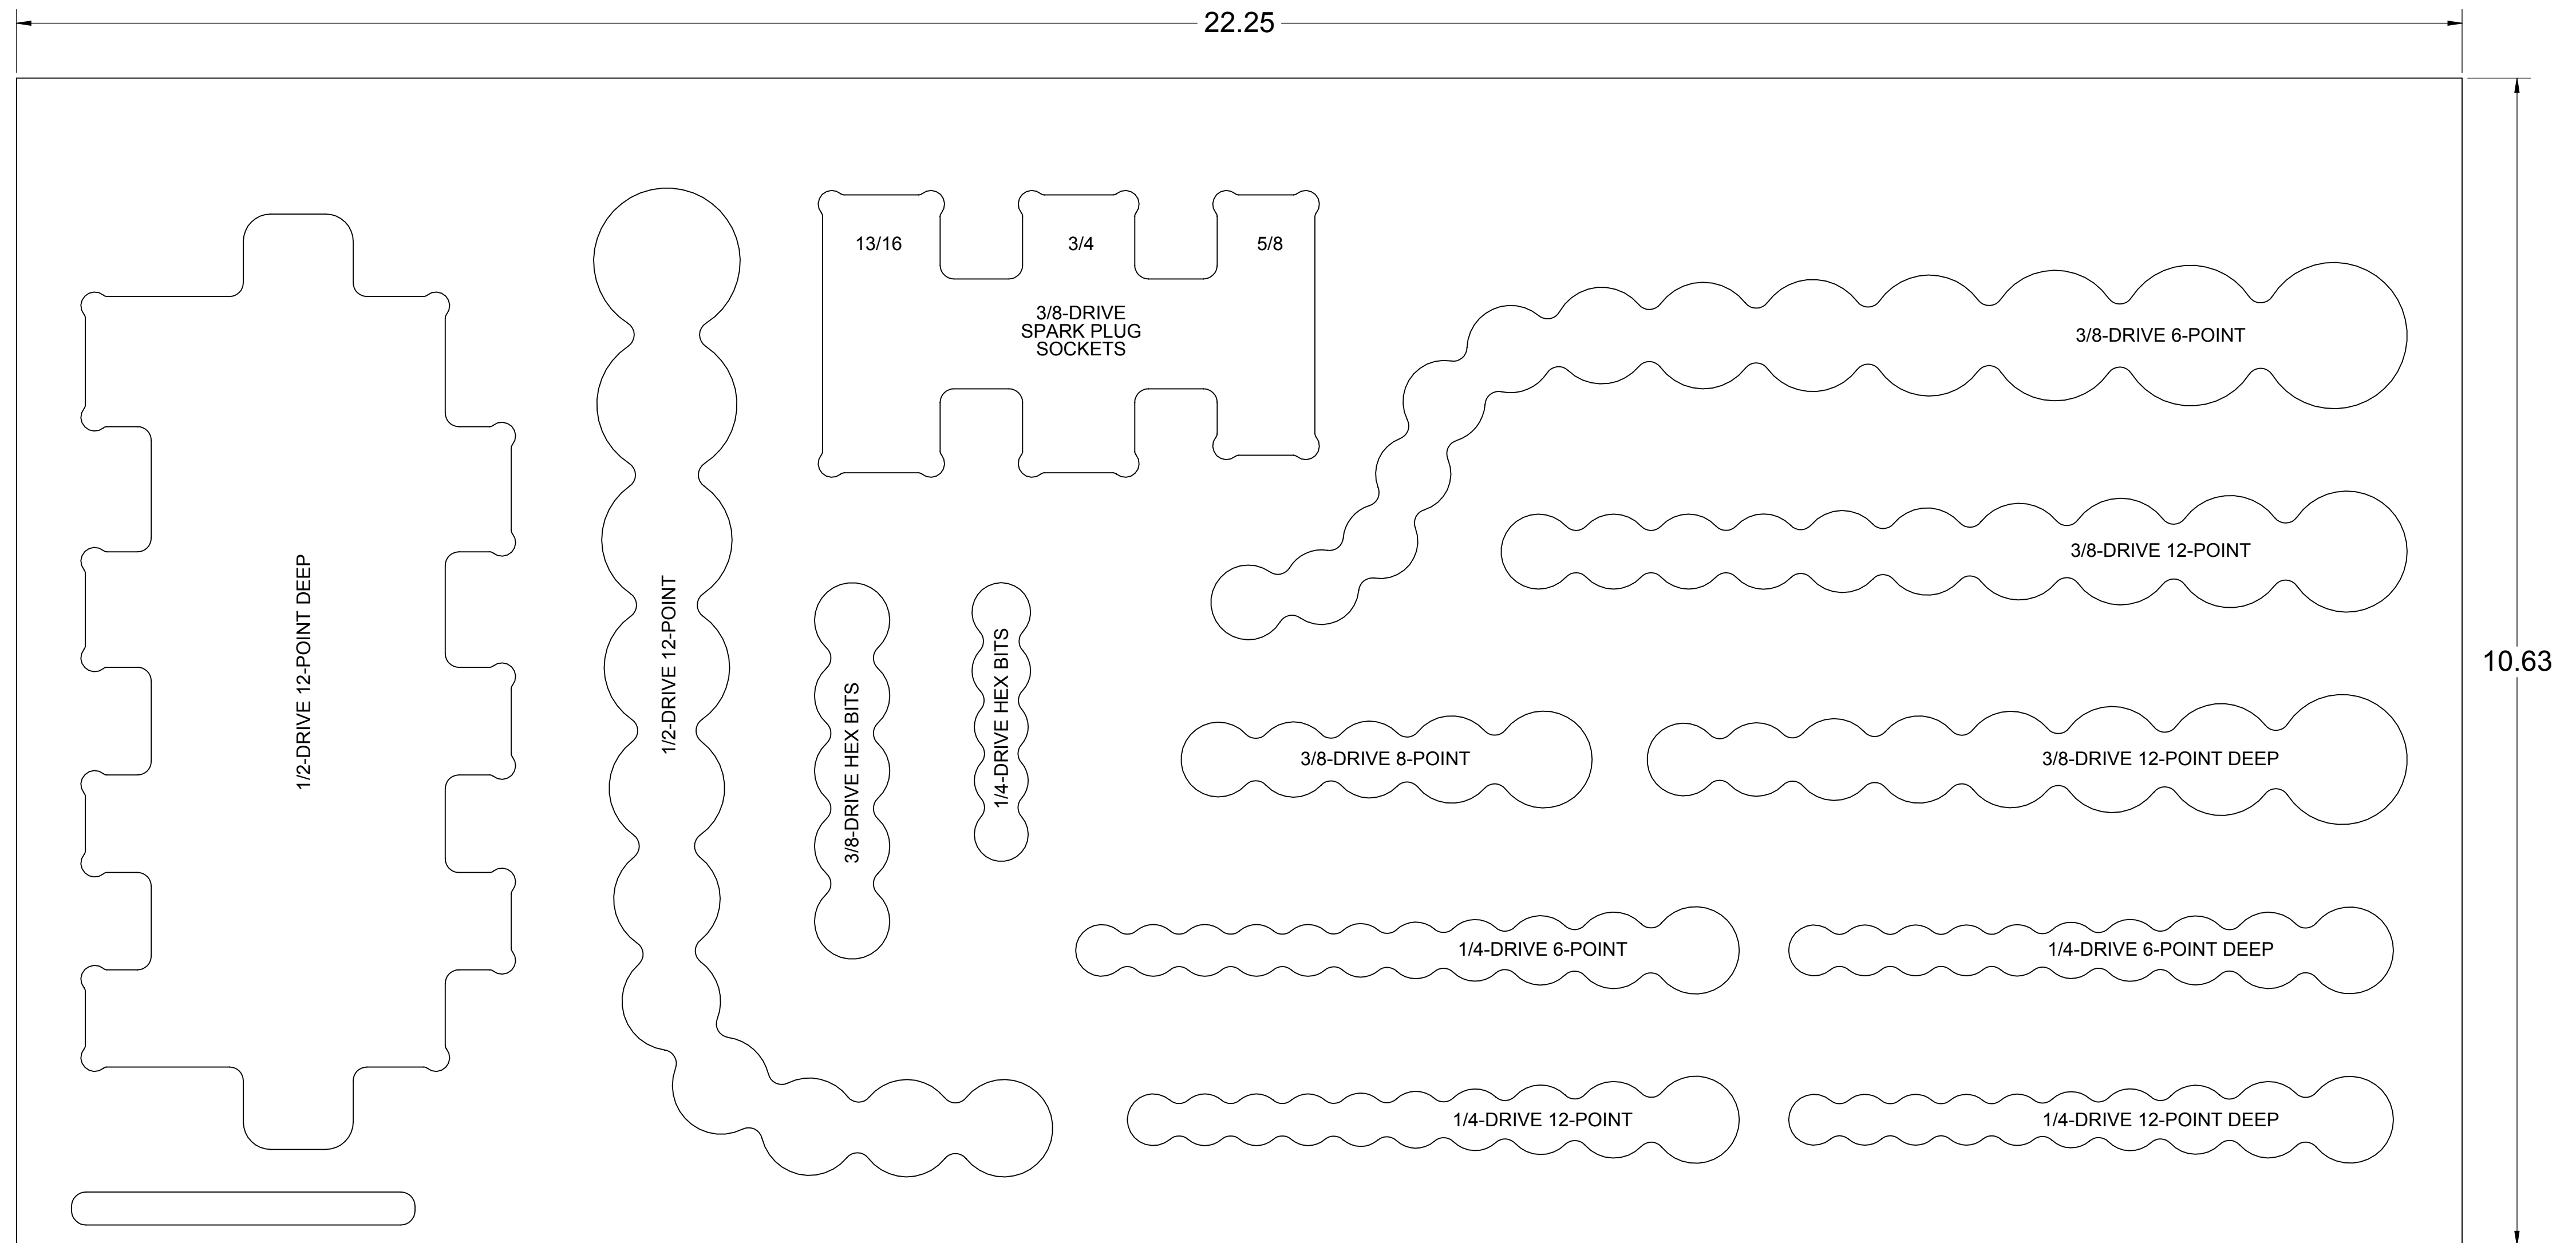

PART NUMBER
F1A-00620

**CAUTION
REQUIRES 3-INCH
DRAWER HEIGHT**

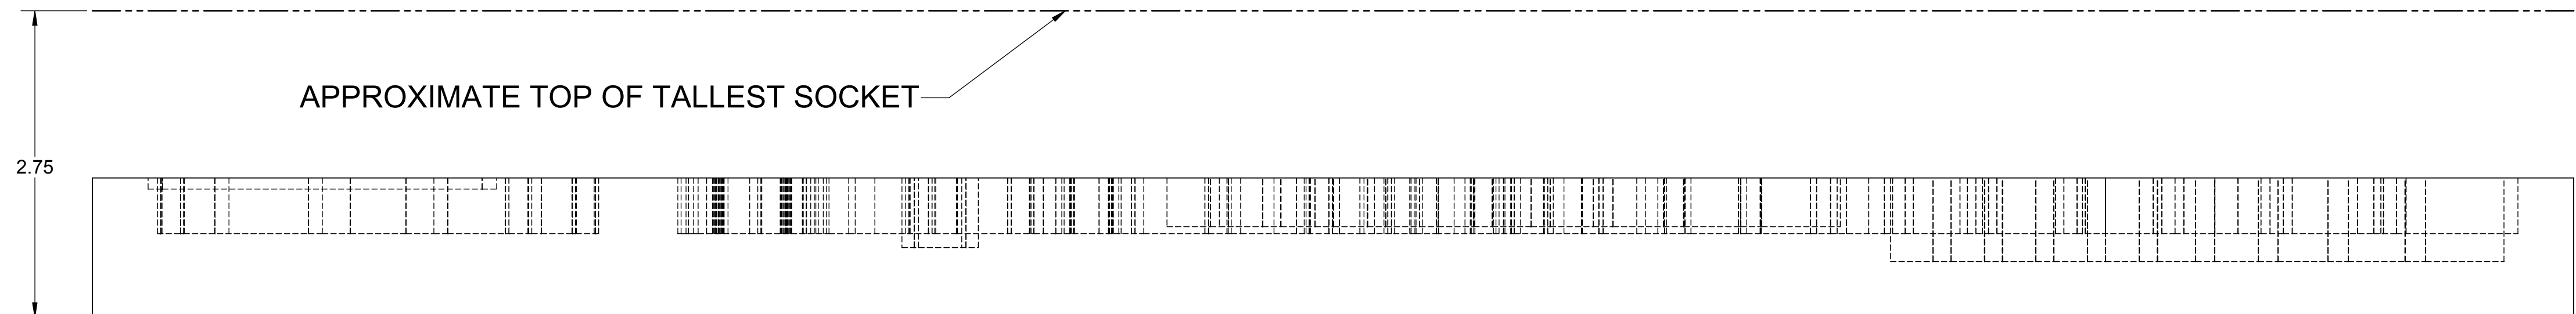


INCH SOCKETS OF
309 PIECE
MECHANICS TOOL SET

Print on Letter at 100%

1.00
IN

1.00 IN

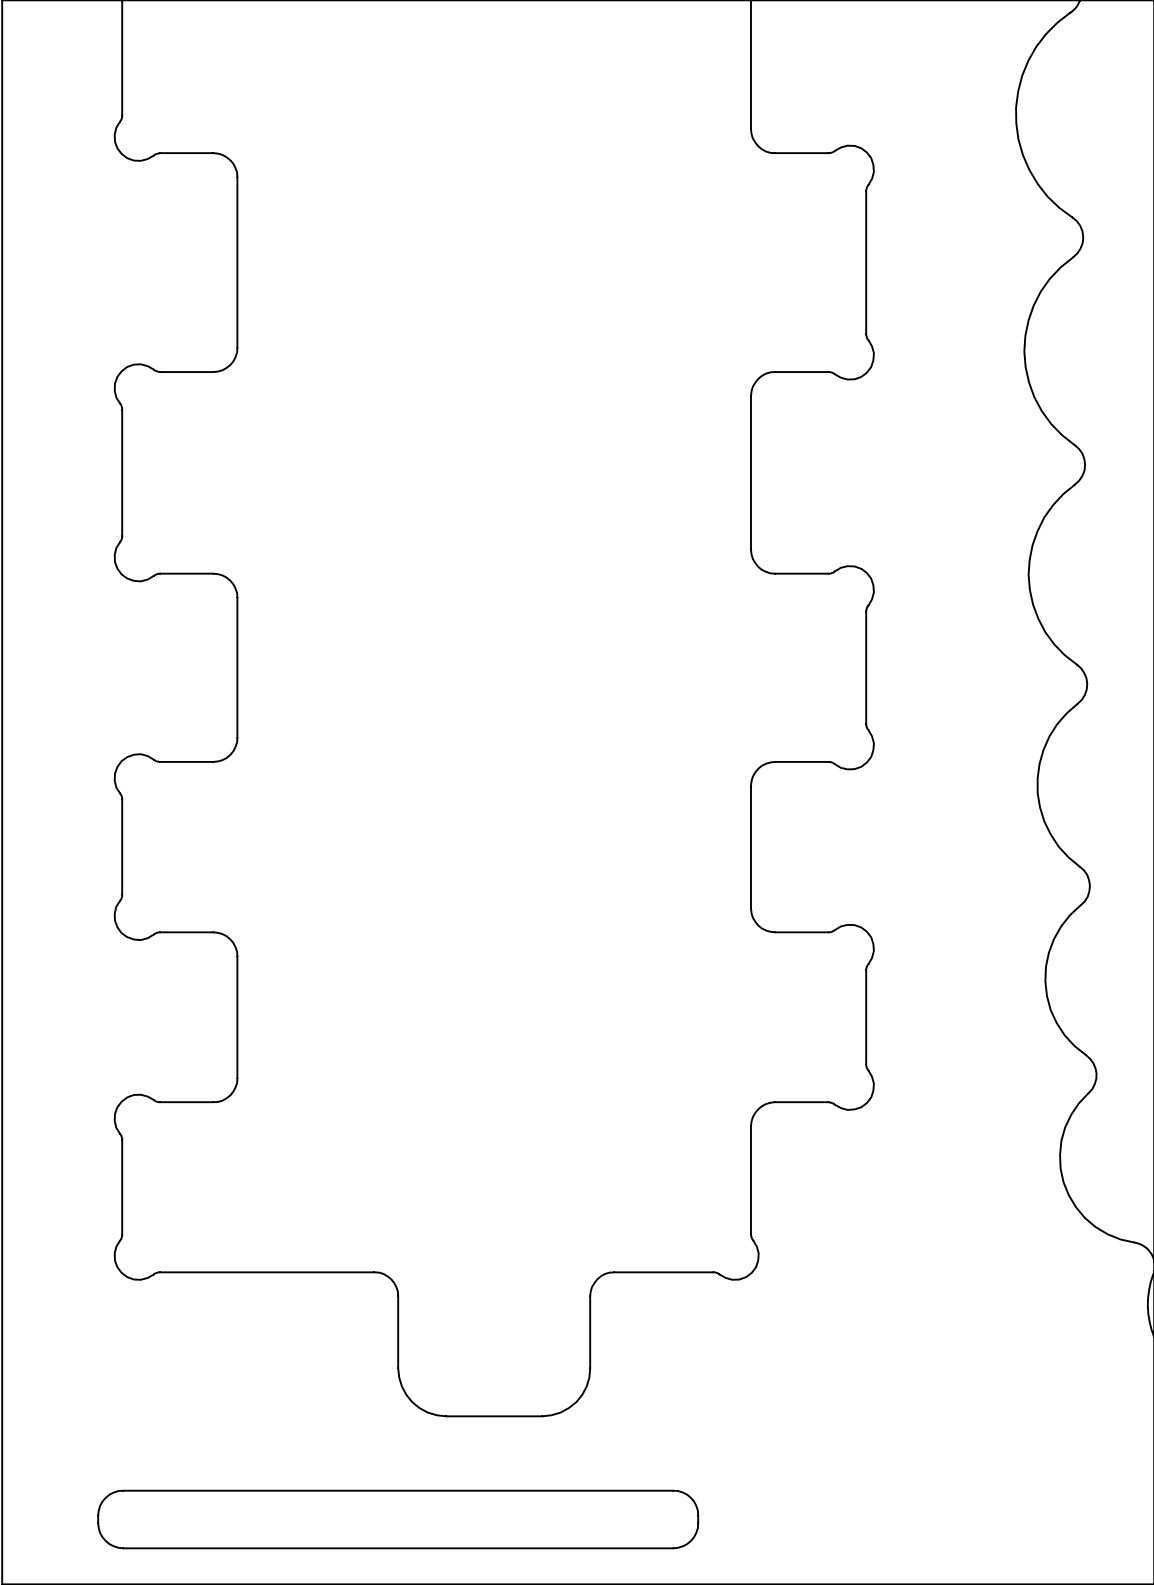

PAGE KEY



PART NUMBER

F1A-00620

DATE CREATED


2 SEP 2013

1.00 IN

PAGE KEY



1.00
IN

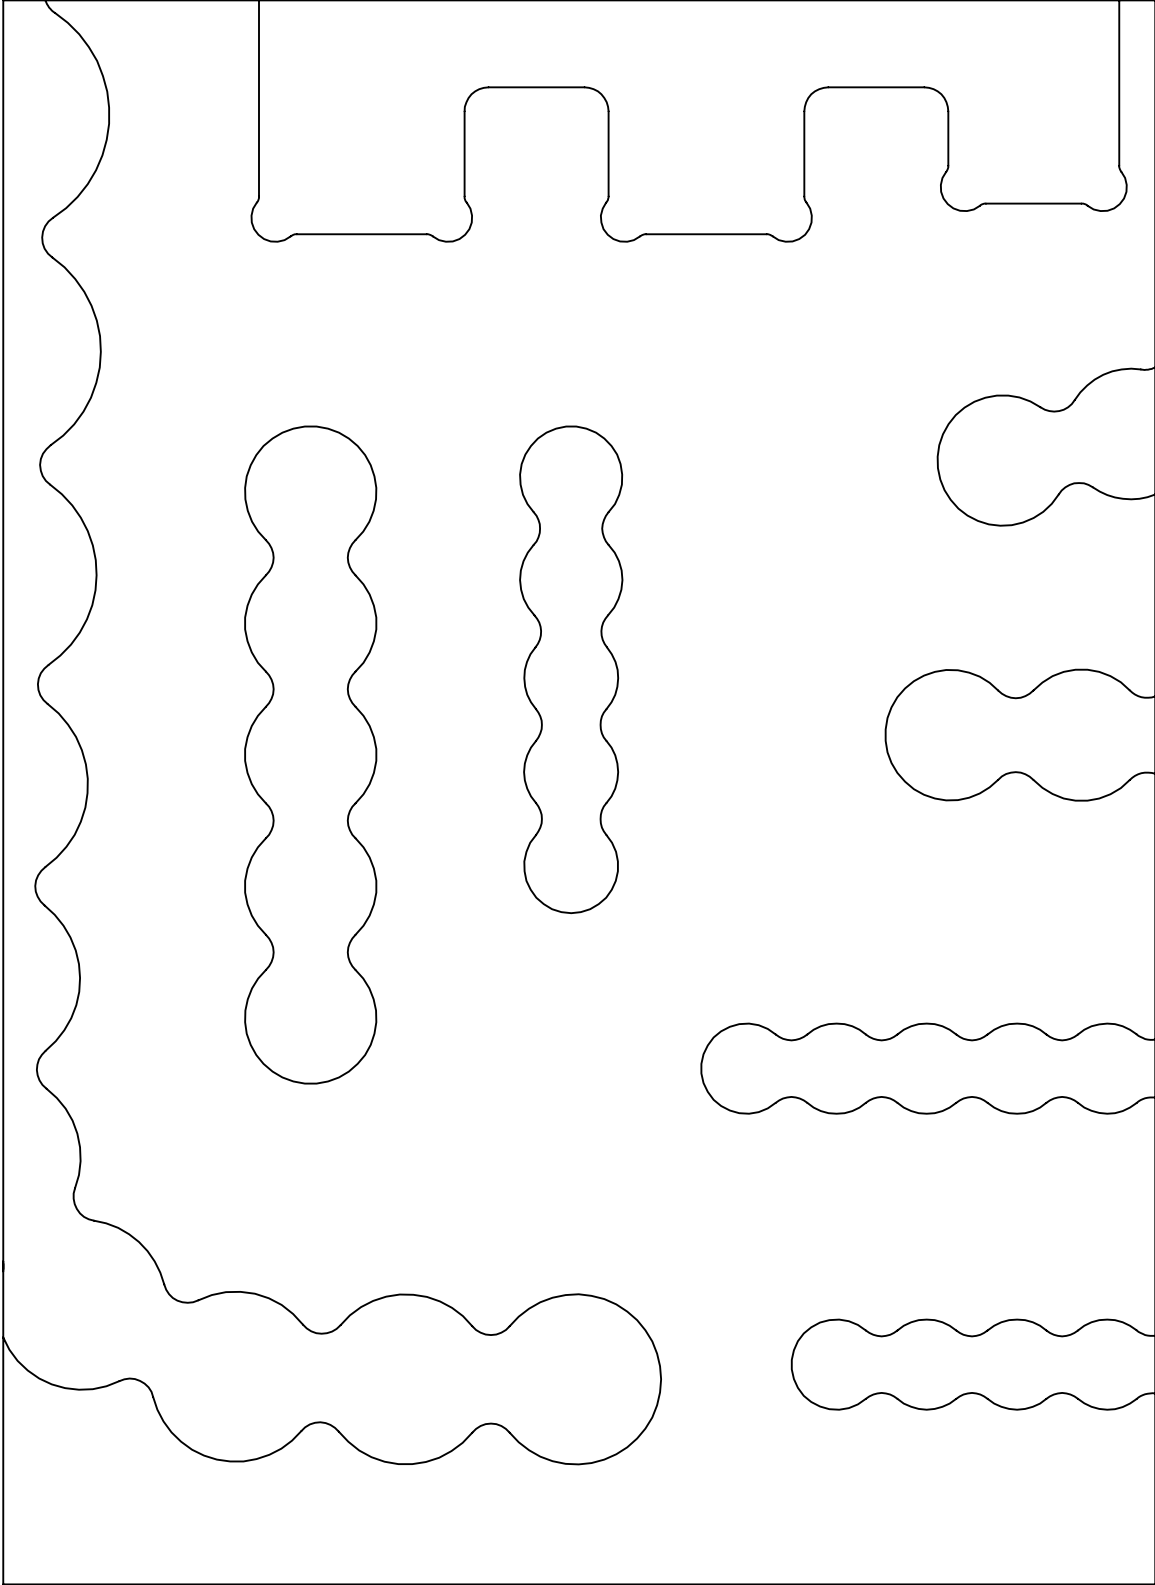

Print on Letter at 100%

DATE CREATED

2 SEP 2013

PART NUMBER


F1A-00620

1.00 IN

PAGE KEY



1.00
IN

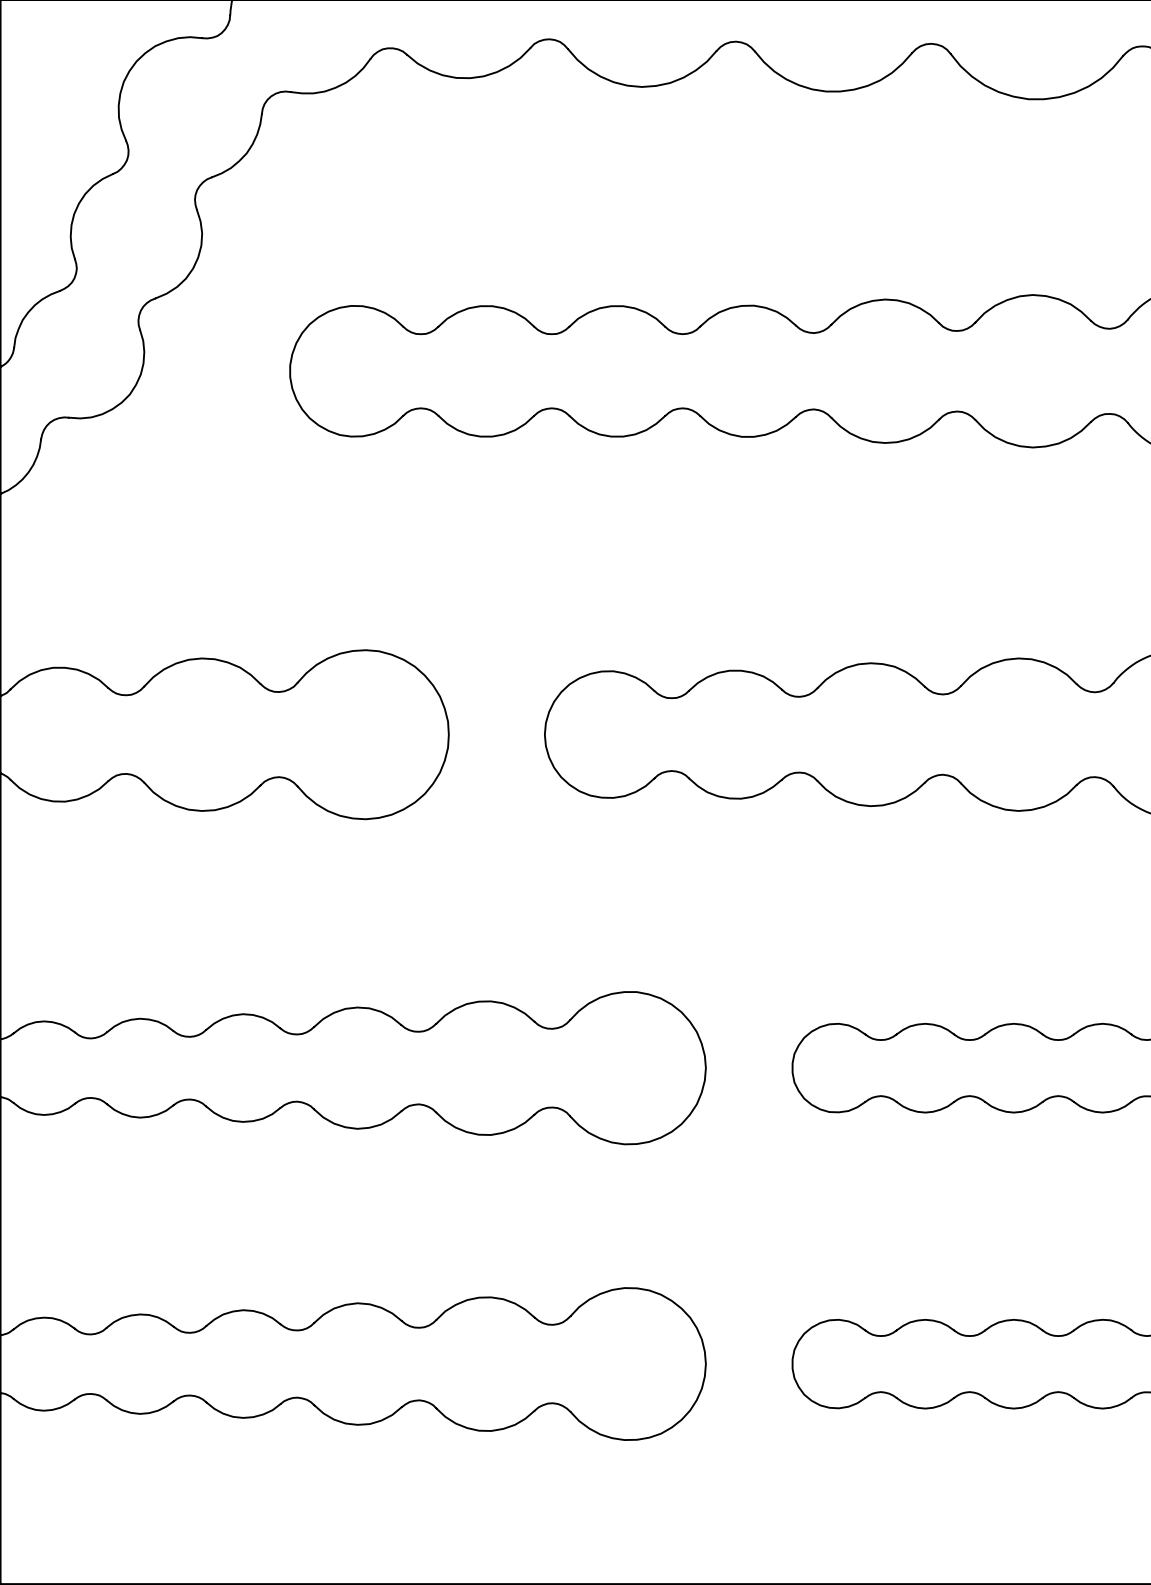

Print on Letter at 100%

DATE CREATED

2 SEP 2013

PART NUMBER


F1A-00620

1.00 IN

PAGE KEY



1.00
IN

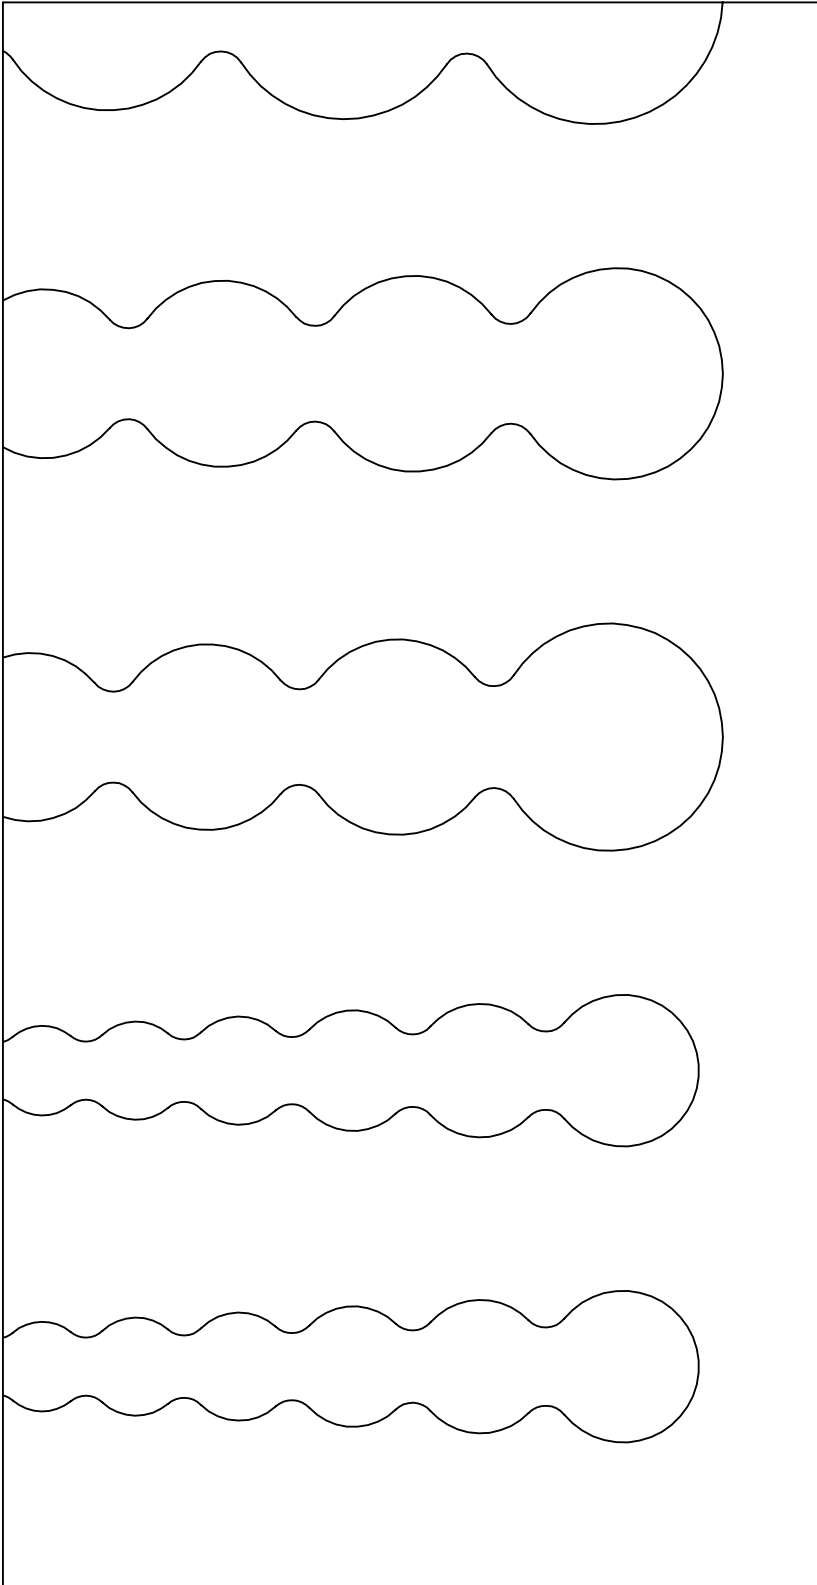

Print on Letter at 100%

DATE CREATED

2 SEP 2013

PART NUMBER

F1A-00620


1.00 IN

PAGE KEY



1.00
IN

Print on Letter at 100%

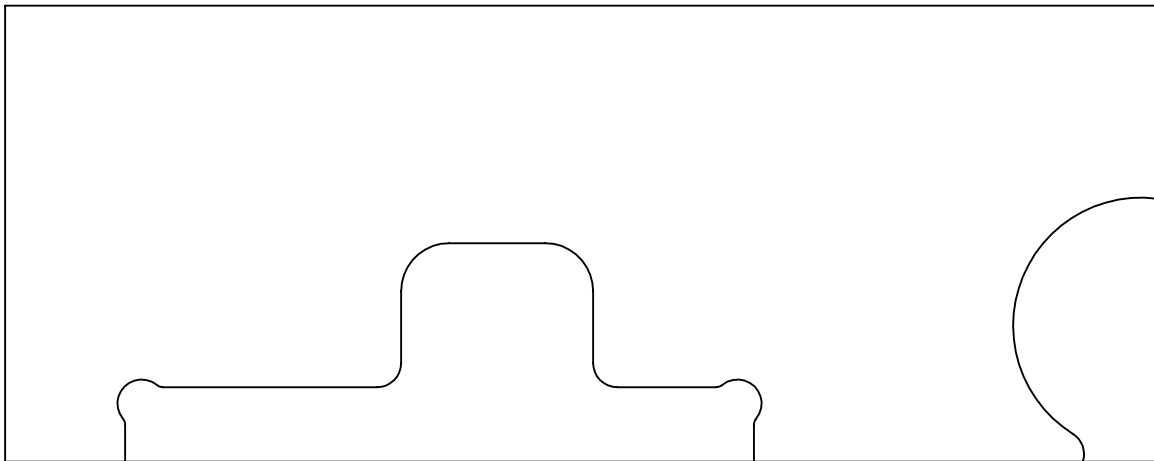

DATE CREATED

2 SEP 2013

PART NUMBER

F1A-00620


1.00 IN

PAGE KEY



1.00
IN

Print on Letter at 100%

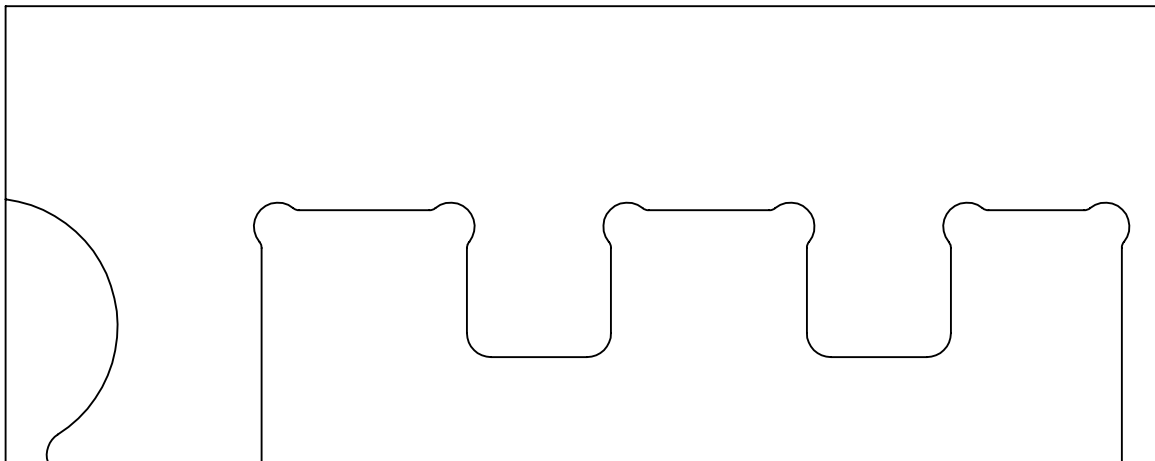

DATE CREATED

2 SEP 2013

PART NUMBER

F1A-00620


1.00 IN

PAGE KEY



1.00
IN

Print on Letter at 100%

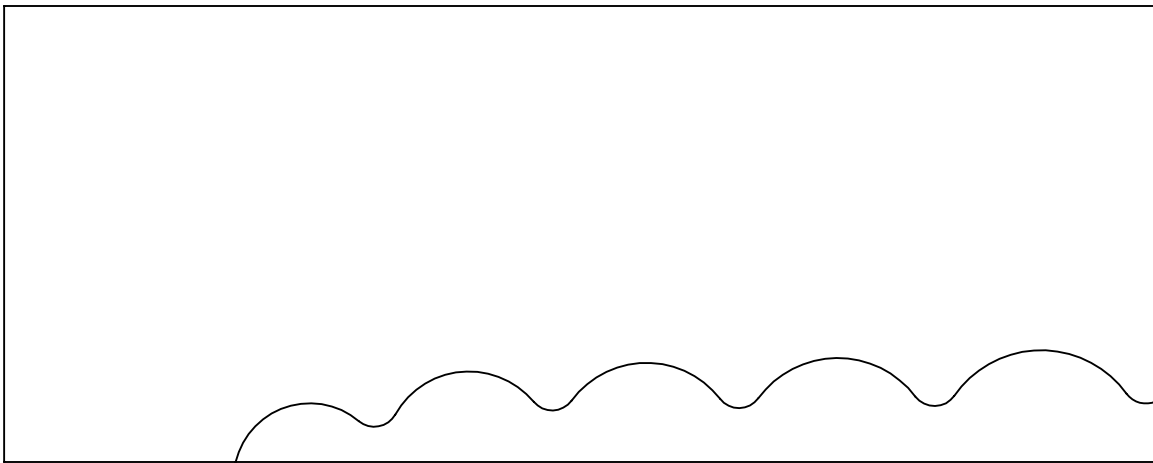

DATE CREATED

2 SEP 2013

PART NUMBER

F1A-00620


1.00 IN

PAGE KEY



1.00
IN

Print on Letter at 100%

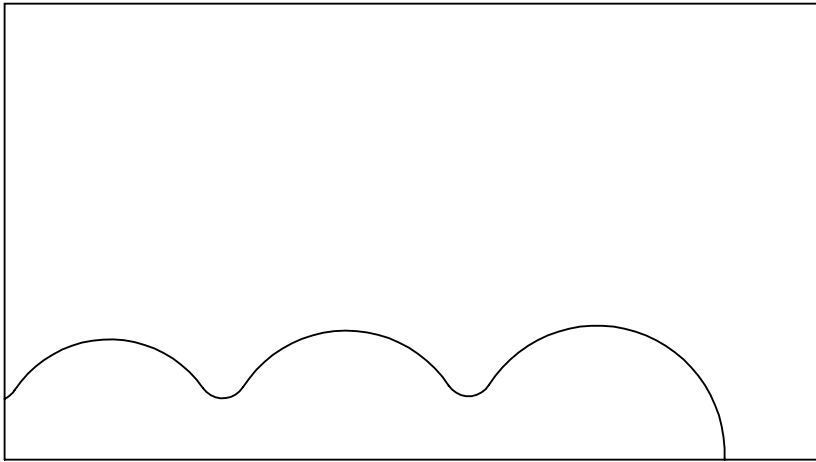

DATE CREATED

2 SEP 2013

PART NUMBER

F1A-00620