

PRINTING INSTRUCTIONS




We recommend printing at full-scale to check the fit with your tools before ordering.

Option 1: Print this page full-scale on a large-format printer (D-Size, 34 inches X 22 inches).

Option 2: Print page 2 - 9 on 8-1/2 X 11 inch paper and assemble.

Thank You!

THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION.
Copyright 2013 FoamFit Tools

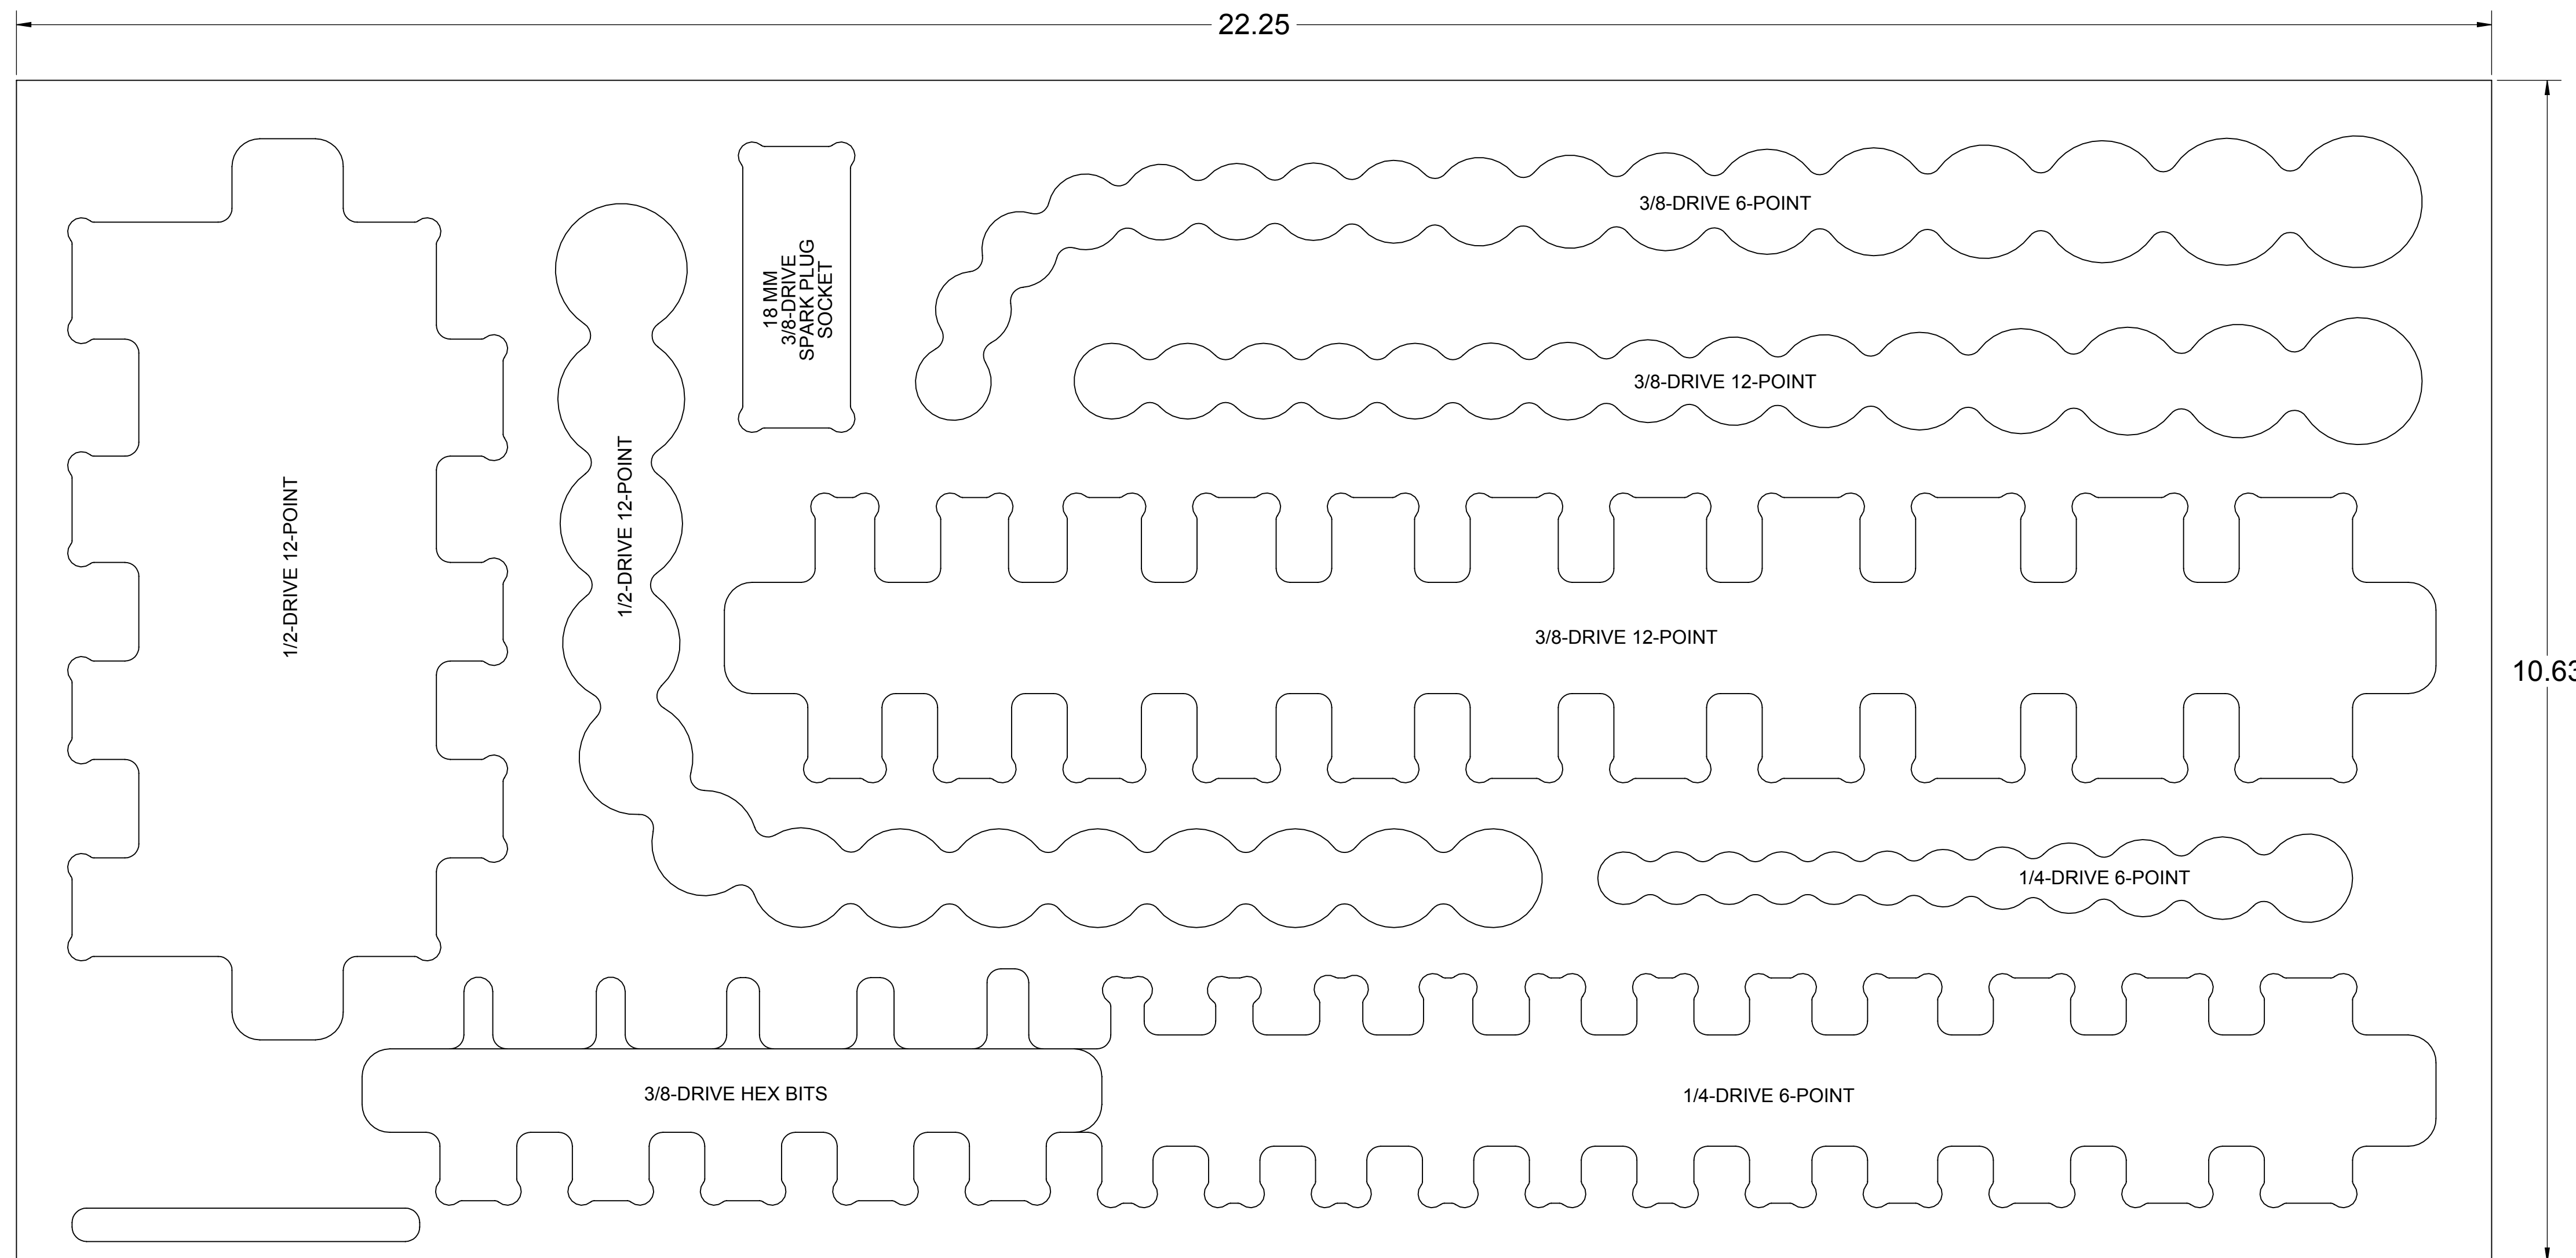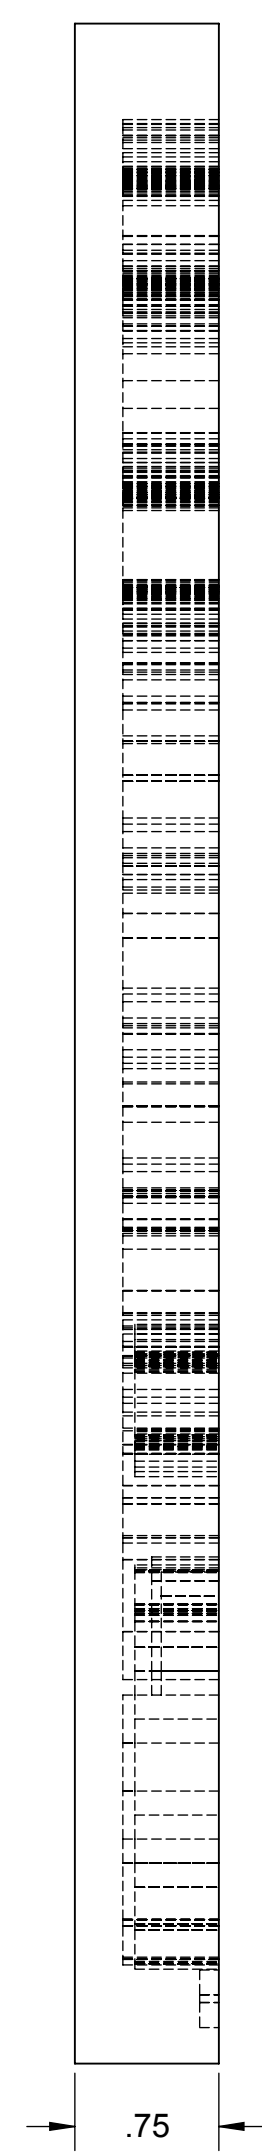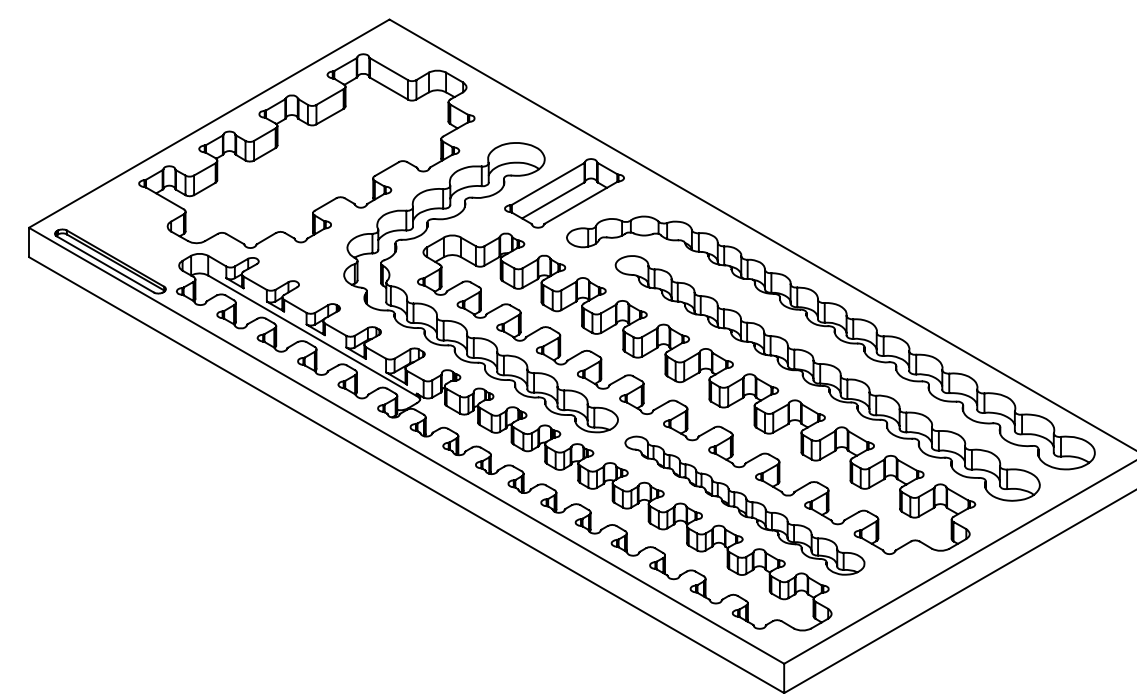

PART NUMBER
F1S-00621


METRIC SOCKETS OF
309 PIECE
MECHANICS TOOL SET

1.00 IN

PAGE KEY



1.00
IN

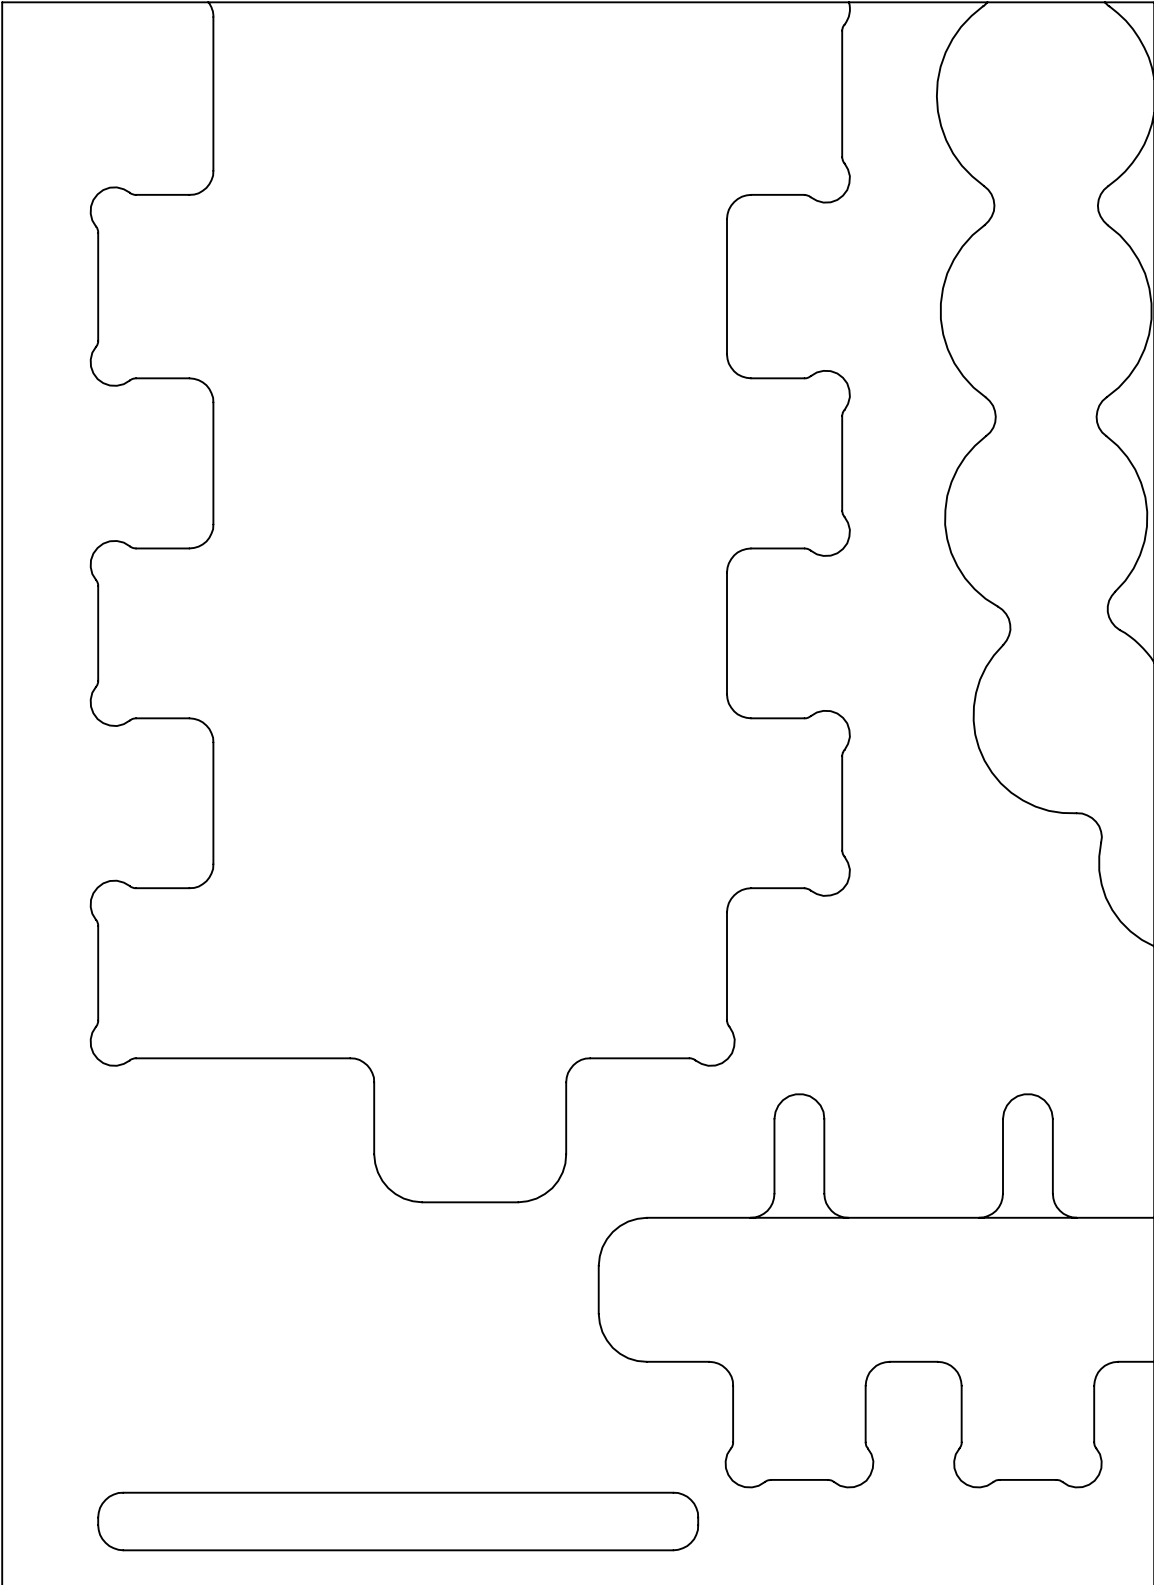

Print on Letter at 100%

DATE CREATED

31 AUG 2013

PART NUMBER


F1S-00621

← 1.00 IN →

PAGE KEY



1.00
IN

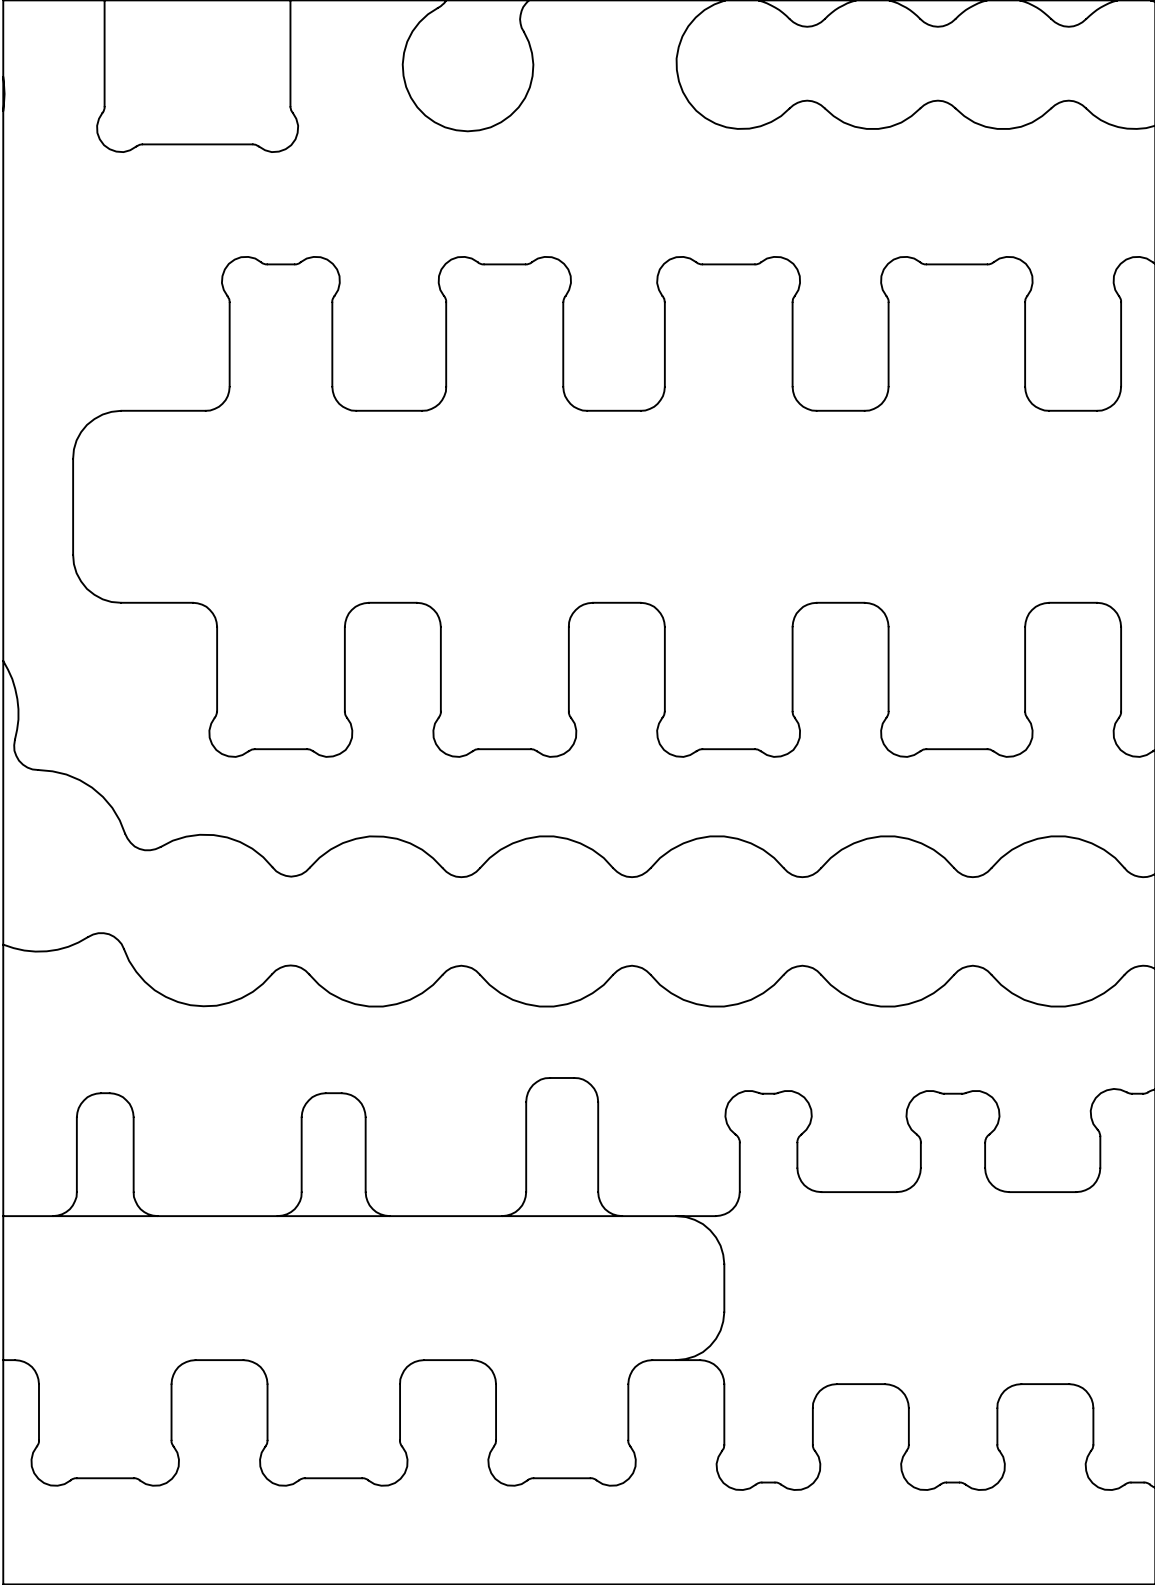

Print on Letter at 100%

DATE CREATED

31 AUG 2013

PART NUMBER


F1S-00621

1.00 IN

PAGE KEY



1.00
IN

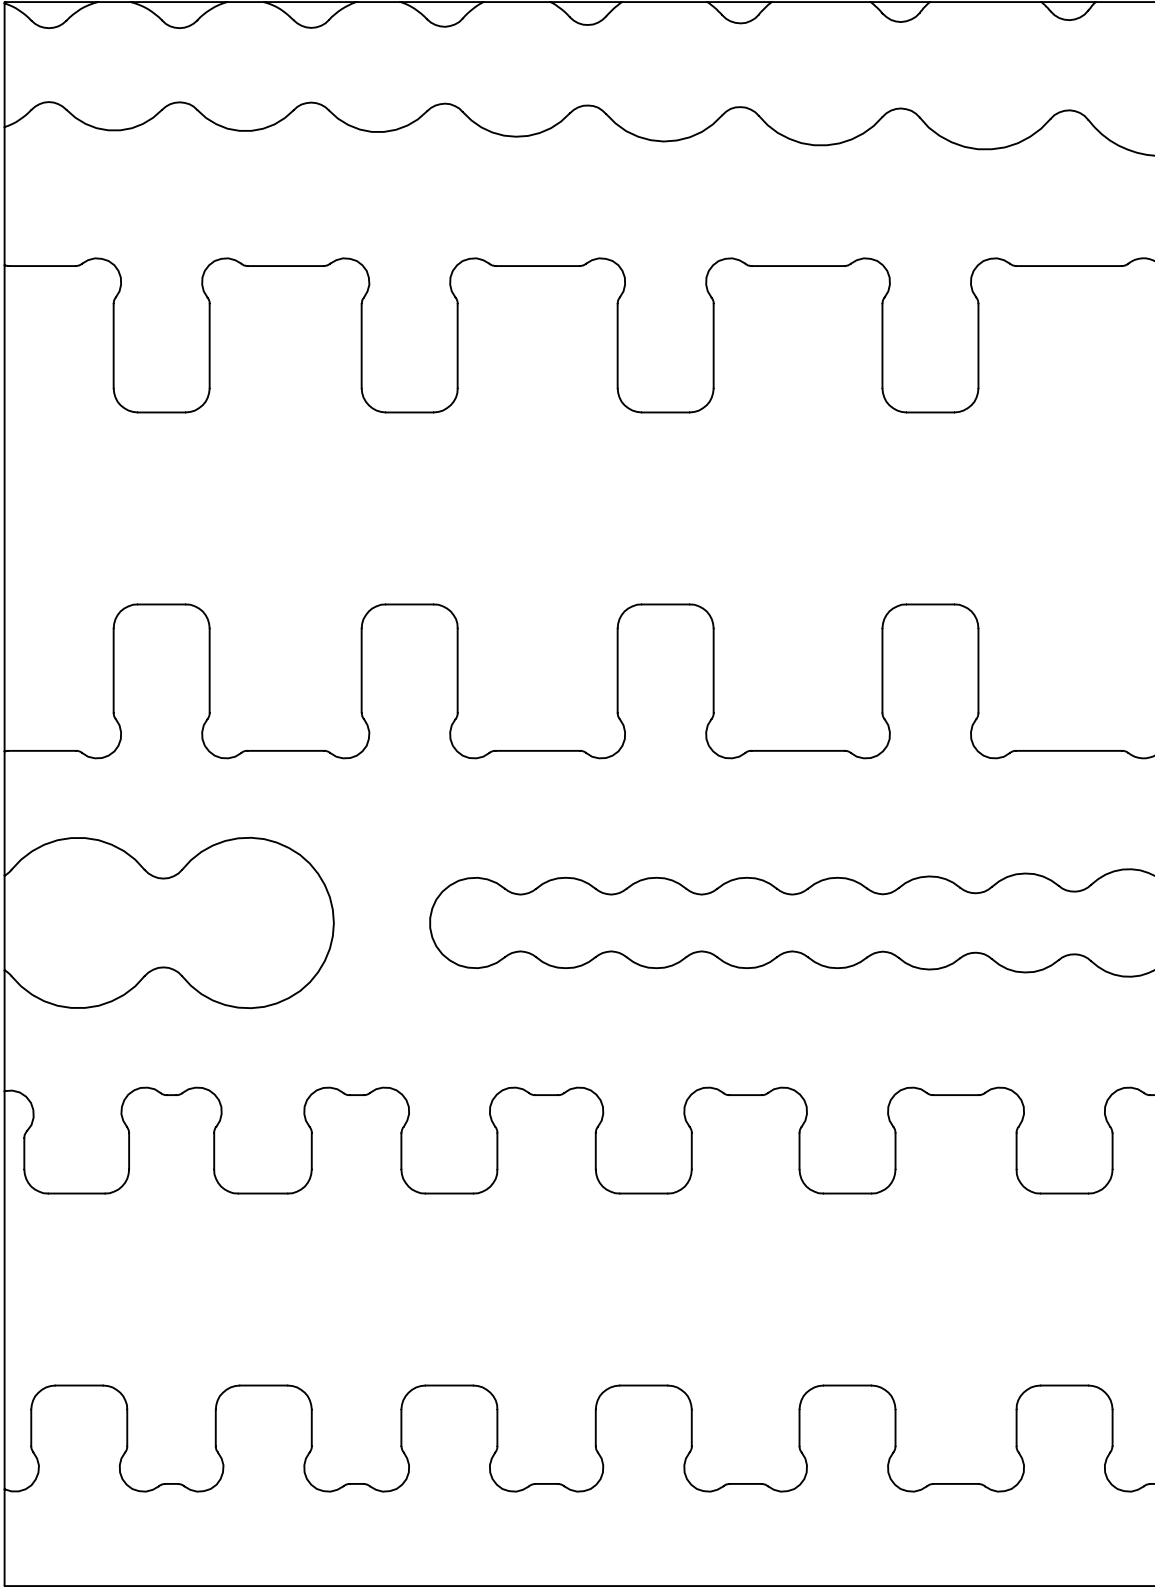

Print on Letter at 100%

DATE CREATED

31 AUG 2013

PART NUMBER


F1S-00621

1.00 IN

PAGE KEY



1.00
IN

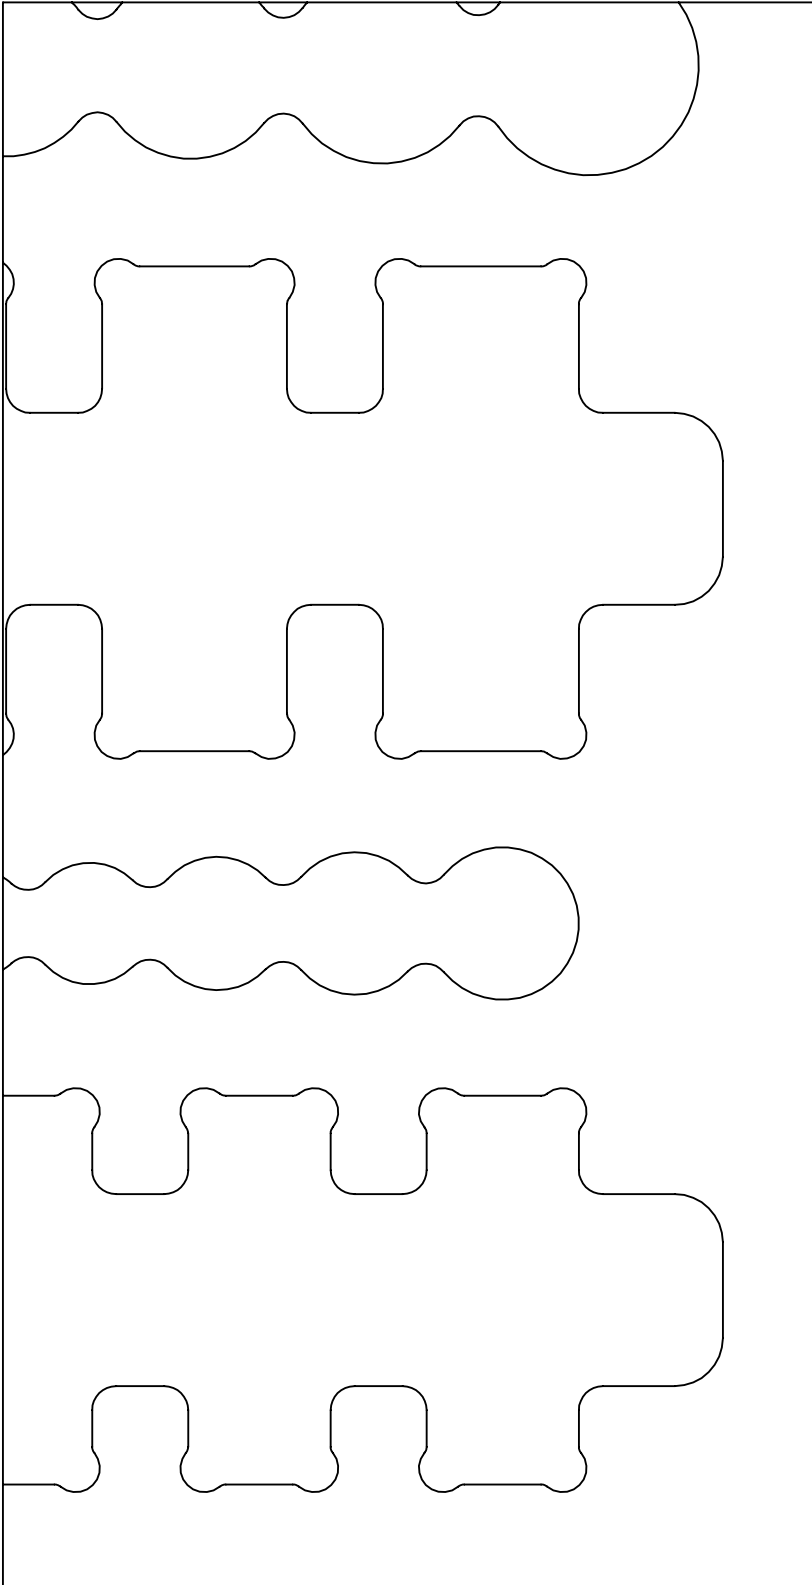

Print on Letter at 100%

DATE CREATED

31 AUG 2013

PART NUMBER

F1S-00621


1.00 IN

PAGE KEY



1.00
IN

Print on Letter at 100%

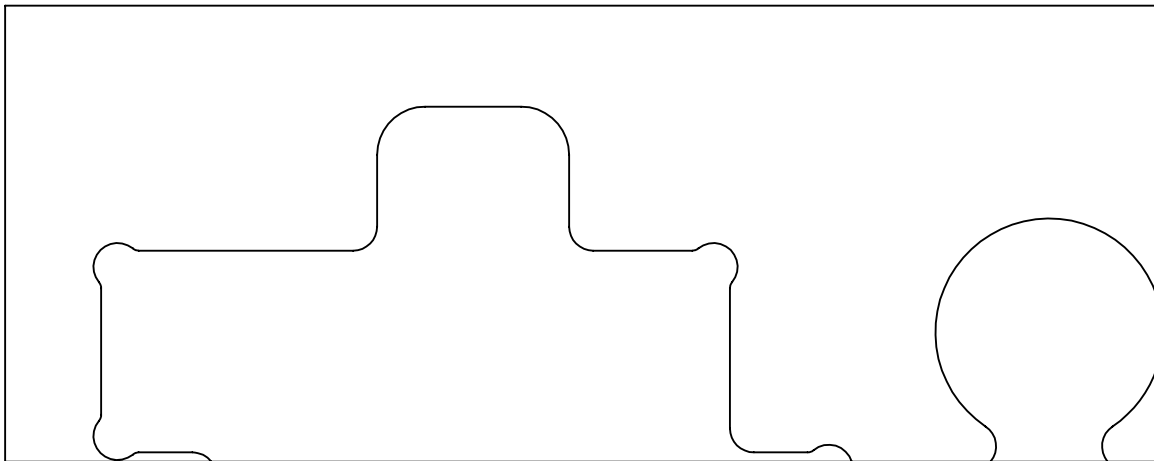

DATE CREATED

31 AUG 2013

PART NUMBER

F1S-00621


1.00 IN

PAGE KEY



1.00
IN

Print on Letter at 100%

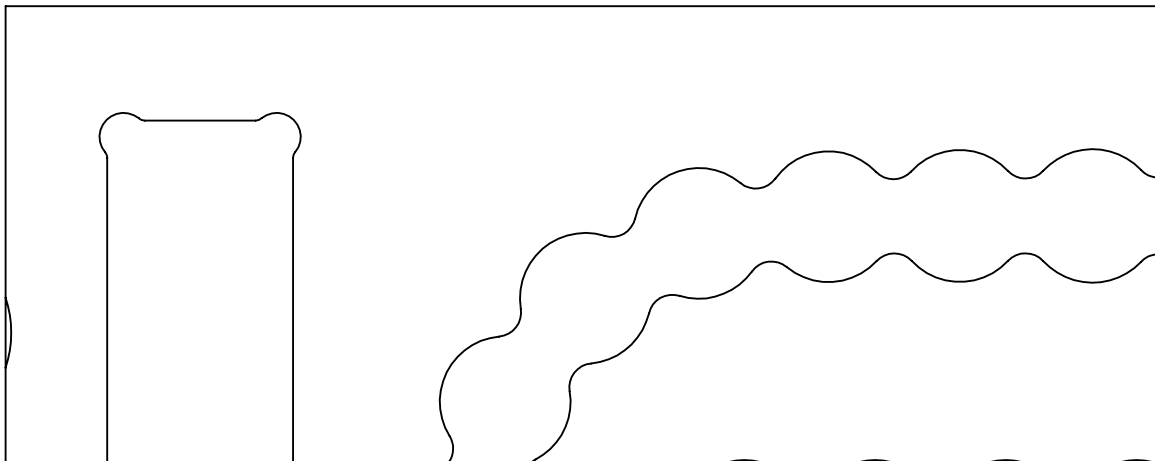

DATE CREATED

31 AUG 2013

PART NUMBER

F1S-00621

1.00 IN

PAGE KEY




1.00
IN

DATE CREATED
31 AUG 2013

PART NUMBER
F1S-00621

Print on Letter at 100%

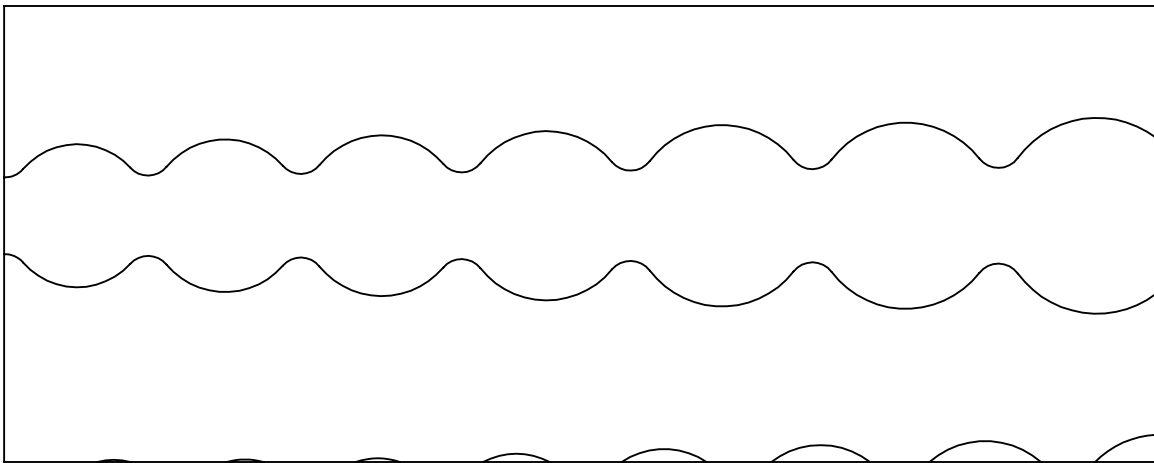


← 1.00 IN →

PAGE KEY



↑
1.00
IN
↓

Print on Letter at 100%

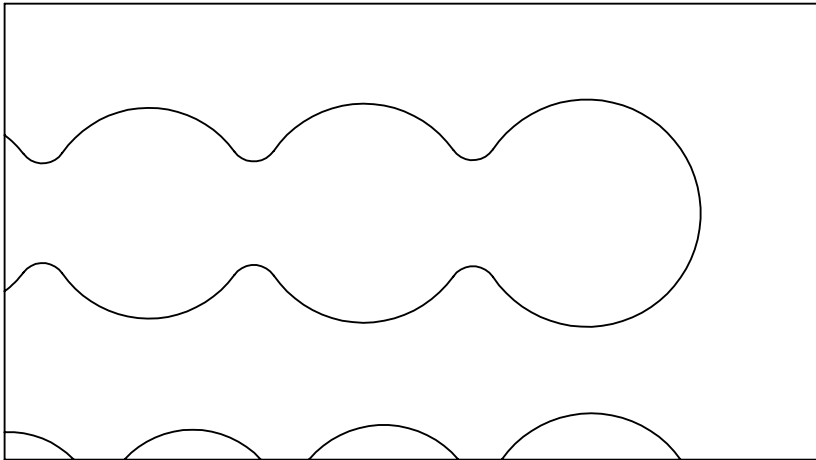

DATE CREATED

31 AUG 2013

PART NUMBER

F1S-00621