THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION.
Copyright 2013 FoamFit Tools

PRINTING INSTRUCTIONS

We recommend printing at full-scale to check the fit with your tools before ordering.

Option 1: Print this page full-scale on a large-format printer (E-Size, 44 inches X 34 inches).

Option 2: Print page 2 - 9 on 8-1/2 X 11 inch paper and assemble.

Thank You!

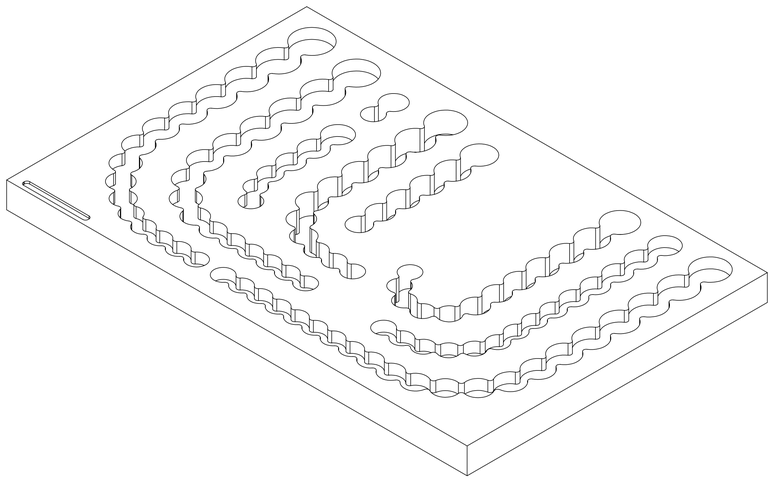

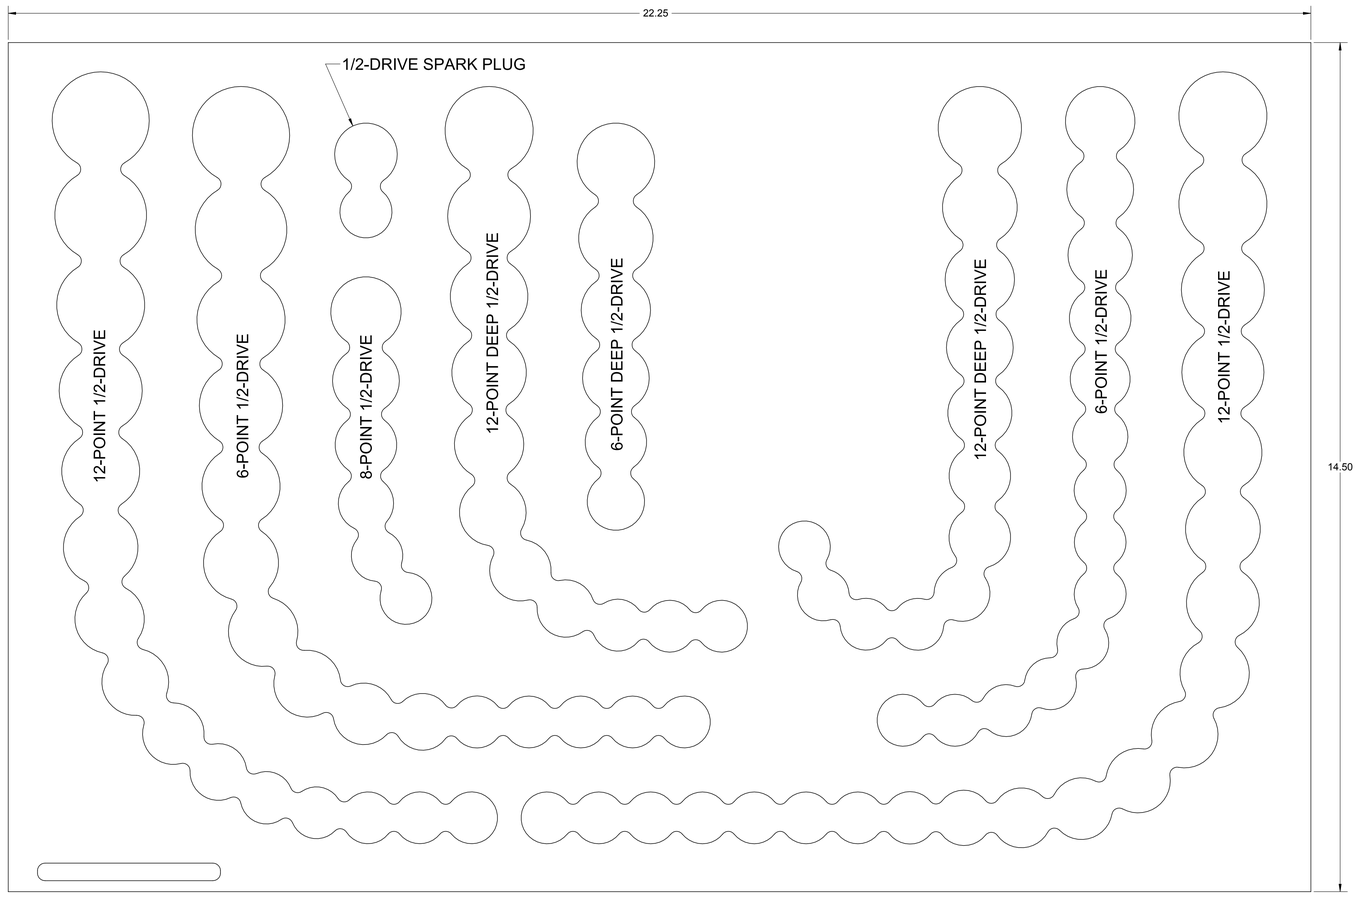

1/2-DRIVE
INCH SOCKETS

1/2-DRIVE
METRIC SOCKETS

CAUTION
REQUIRES 4-INCH
DRAWER HEIGHT

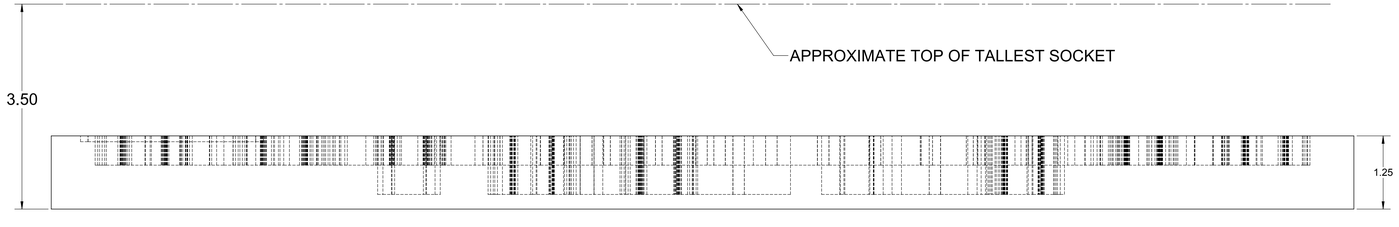

PART NUMBER F1A-00599

1.00 IN

1.00 IN

PAGE KEY

X

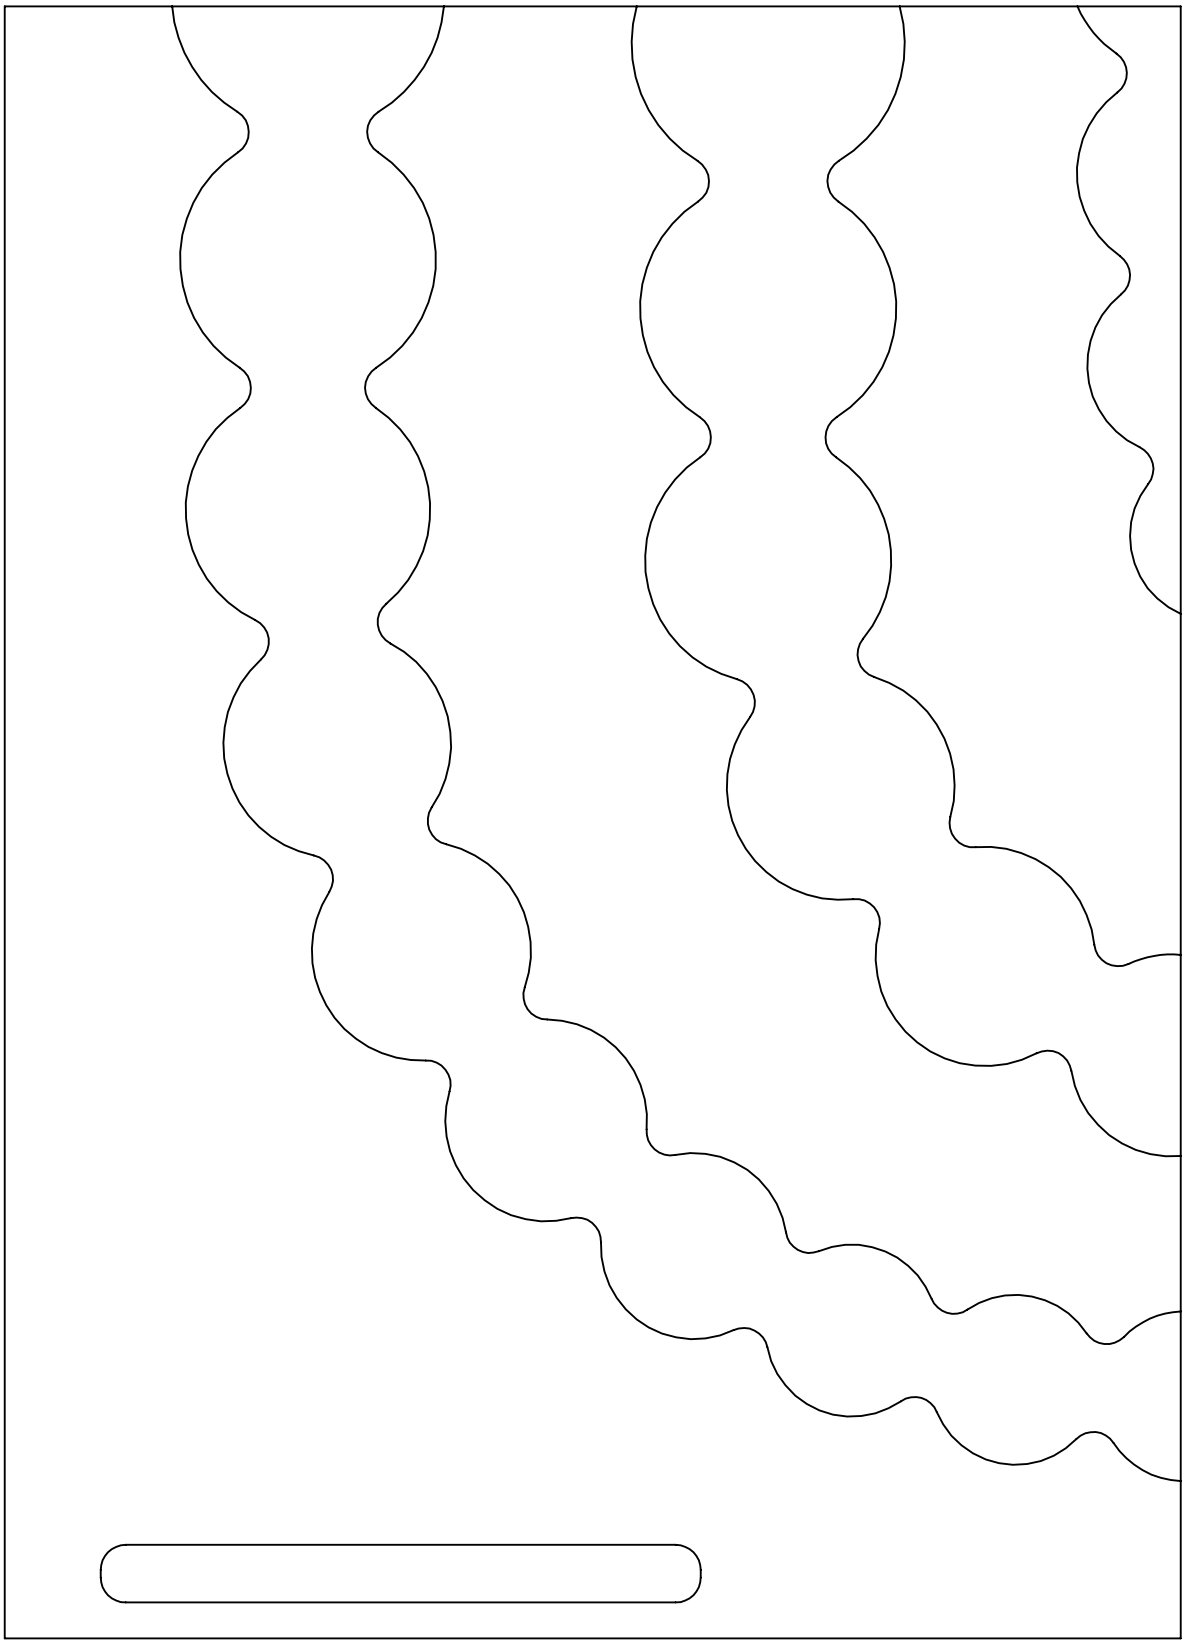

DATE CREATED
24 JUL 2013

PART NUMBER
F1A-00599

Print on Letter at 100%

1.00 IN

1.00 IN

PAGE KEY

X

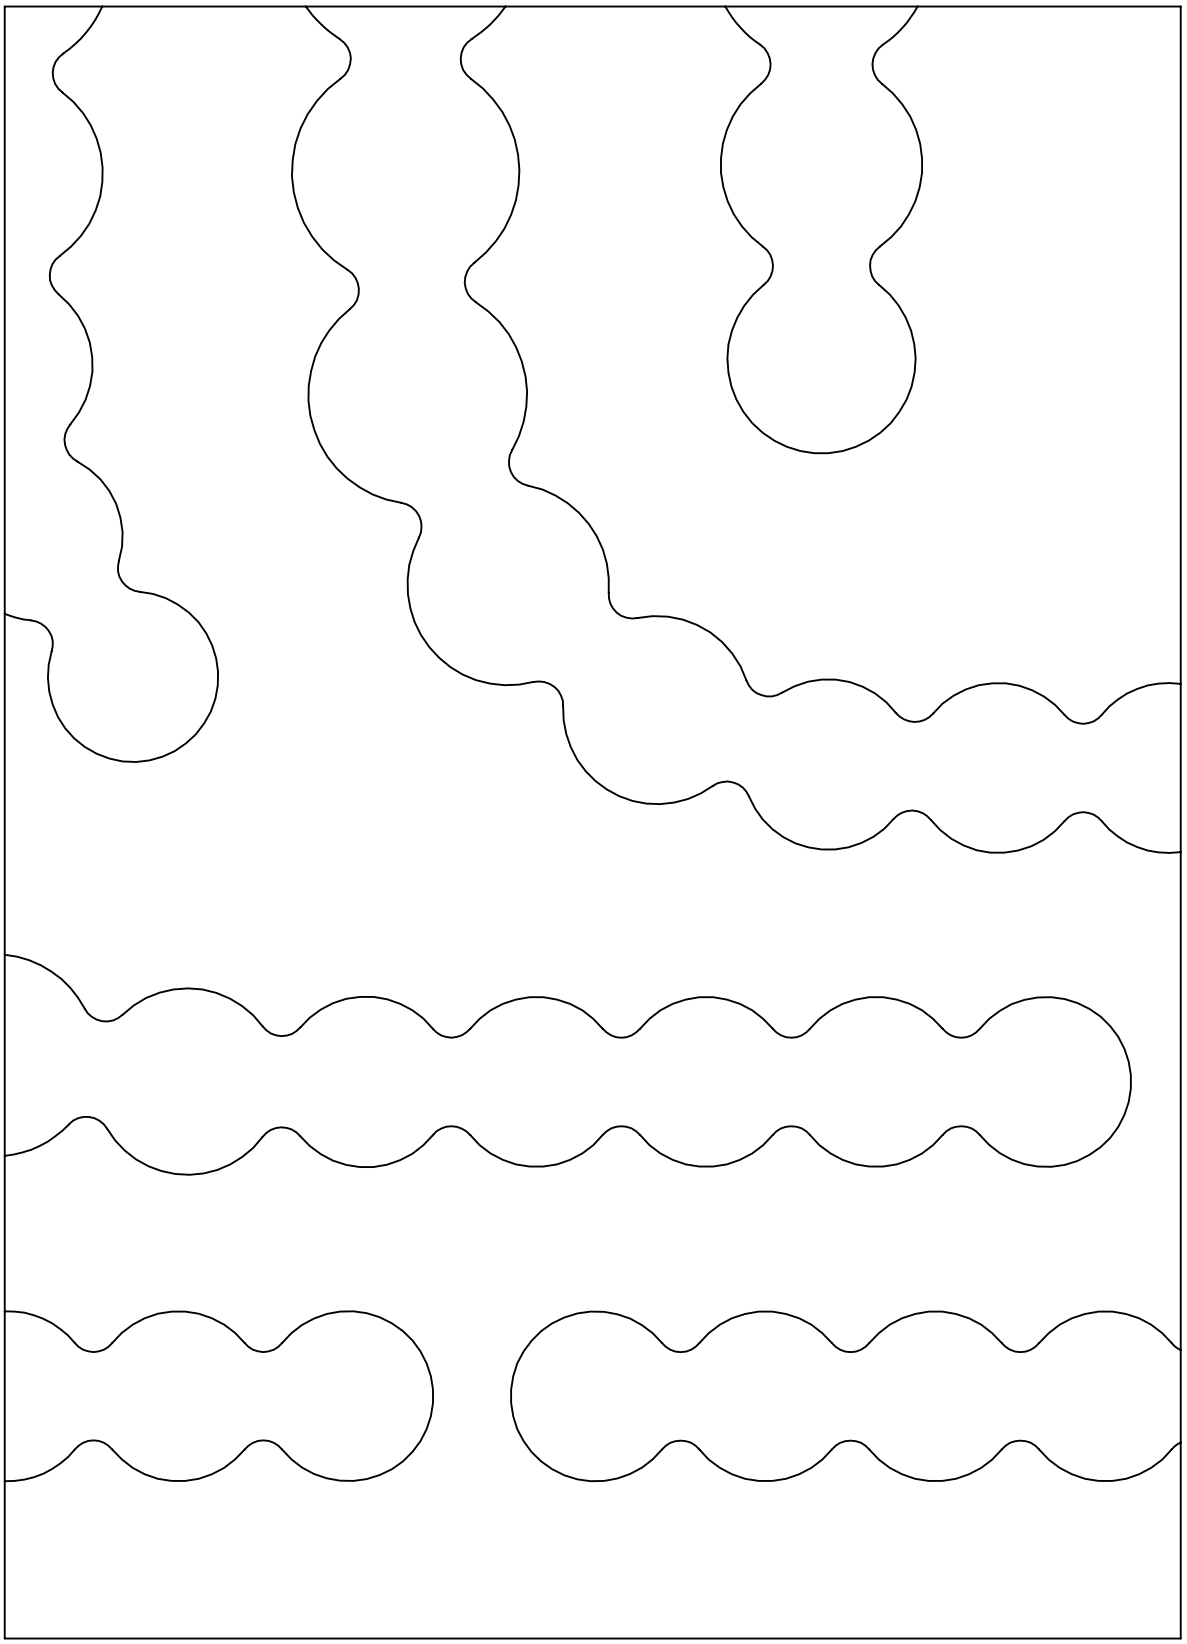

DATE CREATED
24 JUL 2013

PART NUMBER
F1A-00599

Print on Letter at 100%

1.00 IN

1.00 IN

PAGE KEY

X

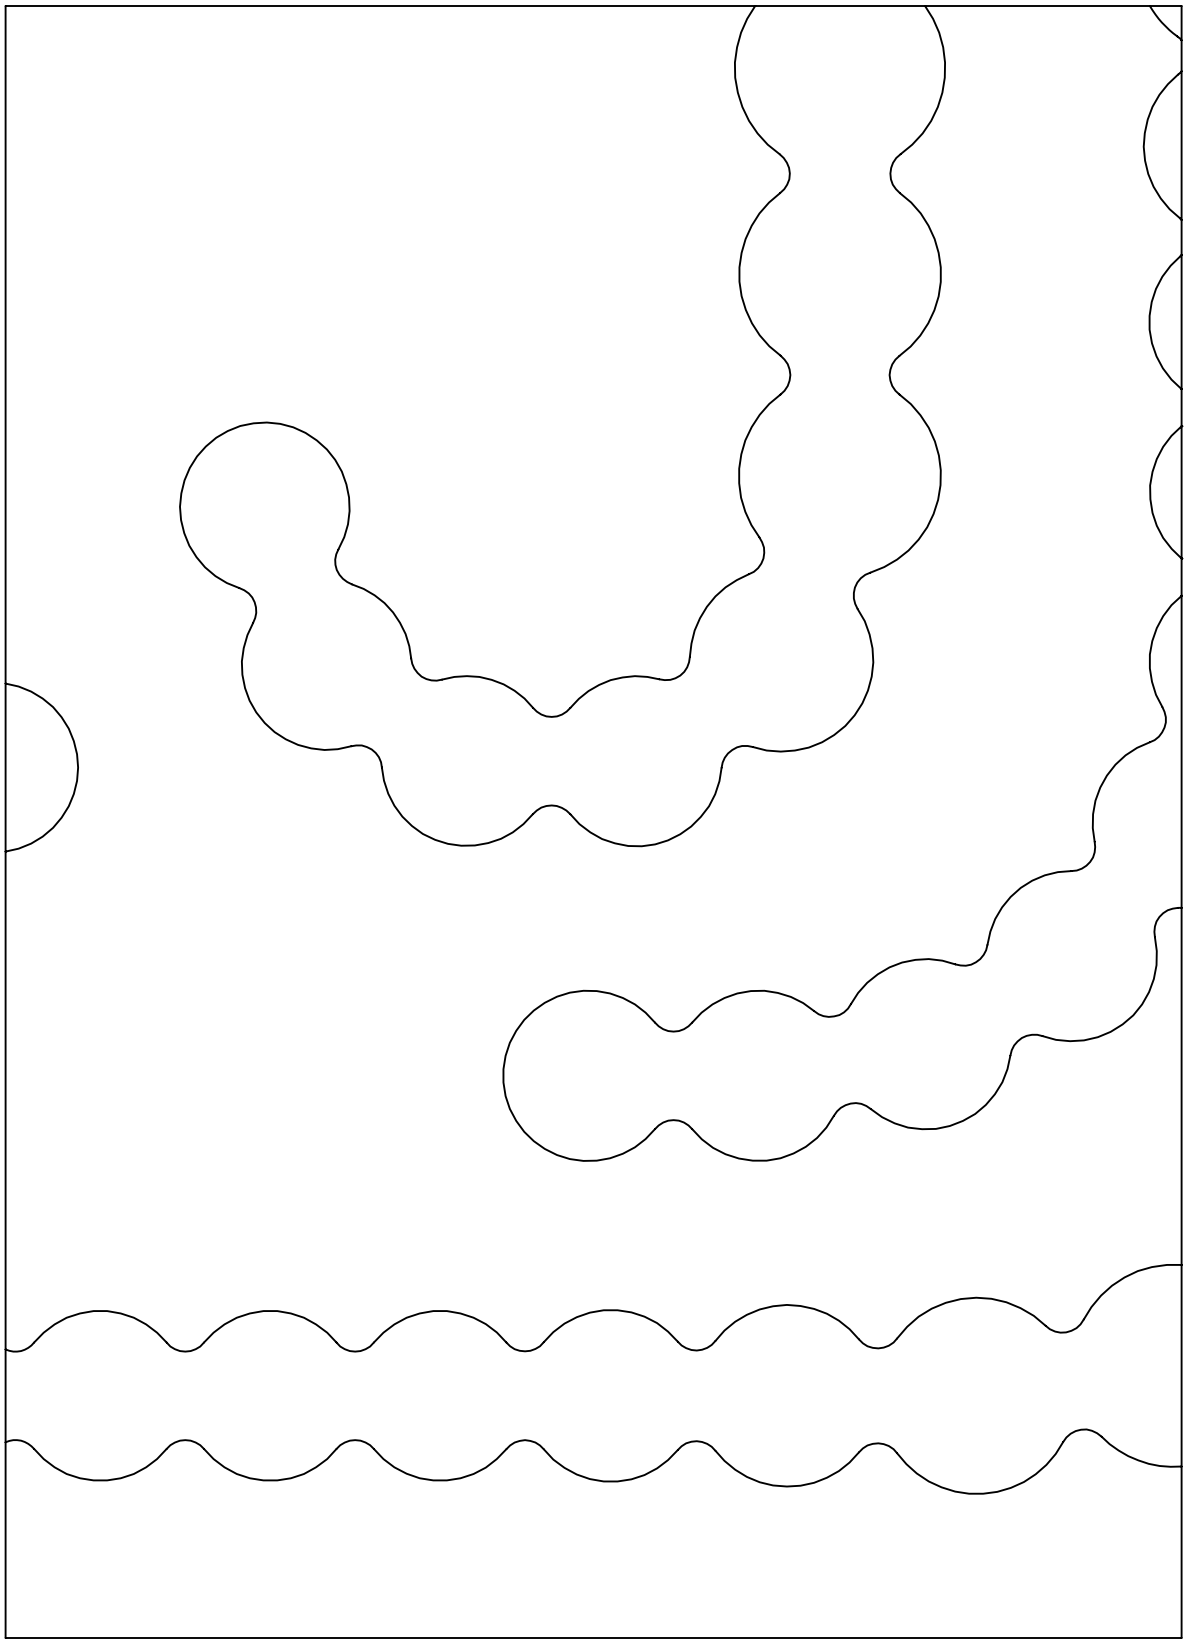

DATE CREATED
24 JUL 2013

PART NUMBER
F1A-00599

Print on Letter at 100%

1.00 IN

PAGE KEY

X

1.00 IN

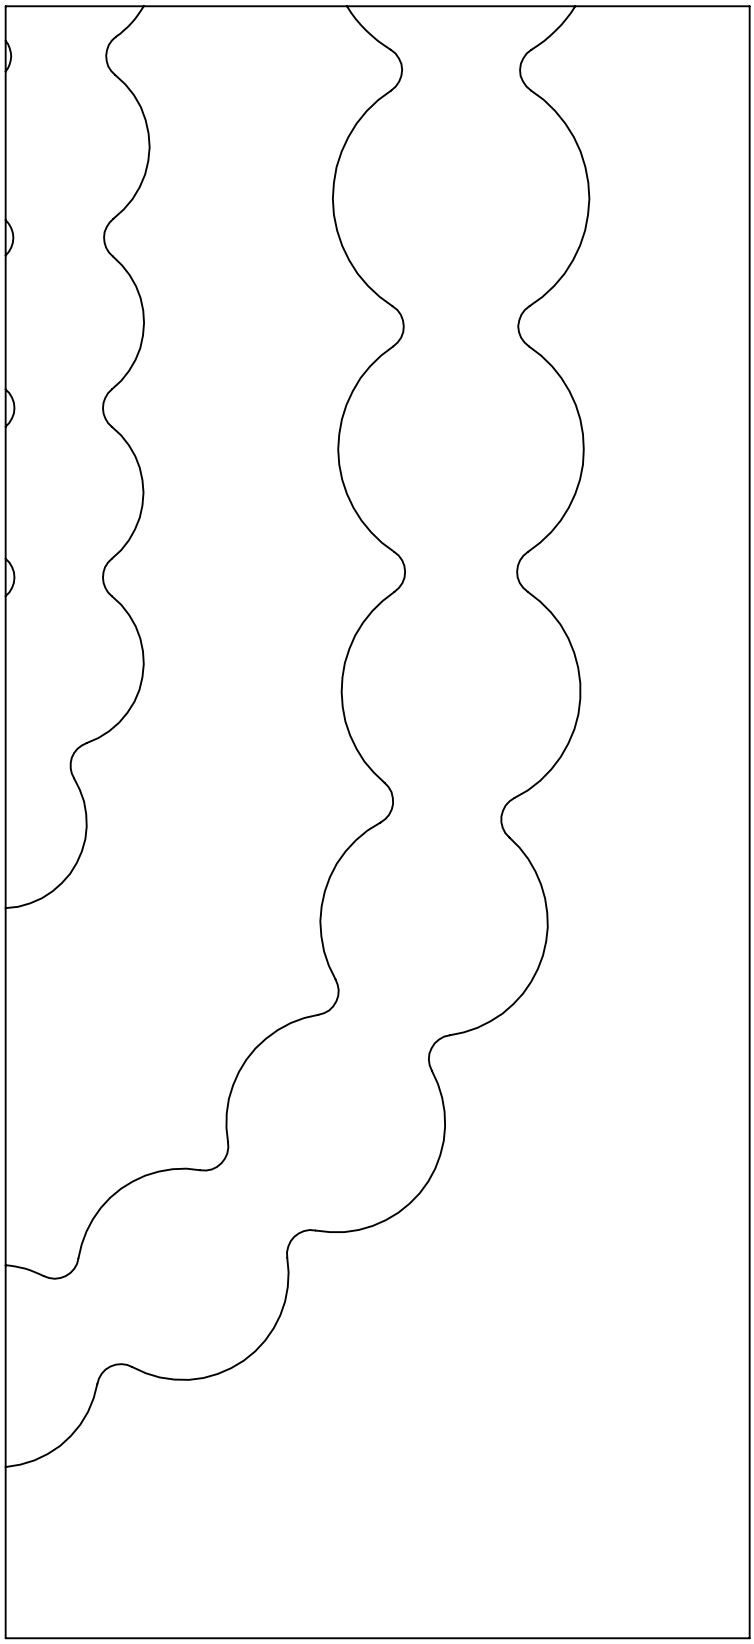

DATE CREATED
24 JUL 2013

PART NUMBER
F1A-00599

Print on Letter at 100%

1.00 IN

1.00 IN

PAGE KEY

X

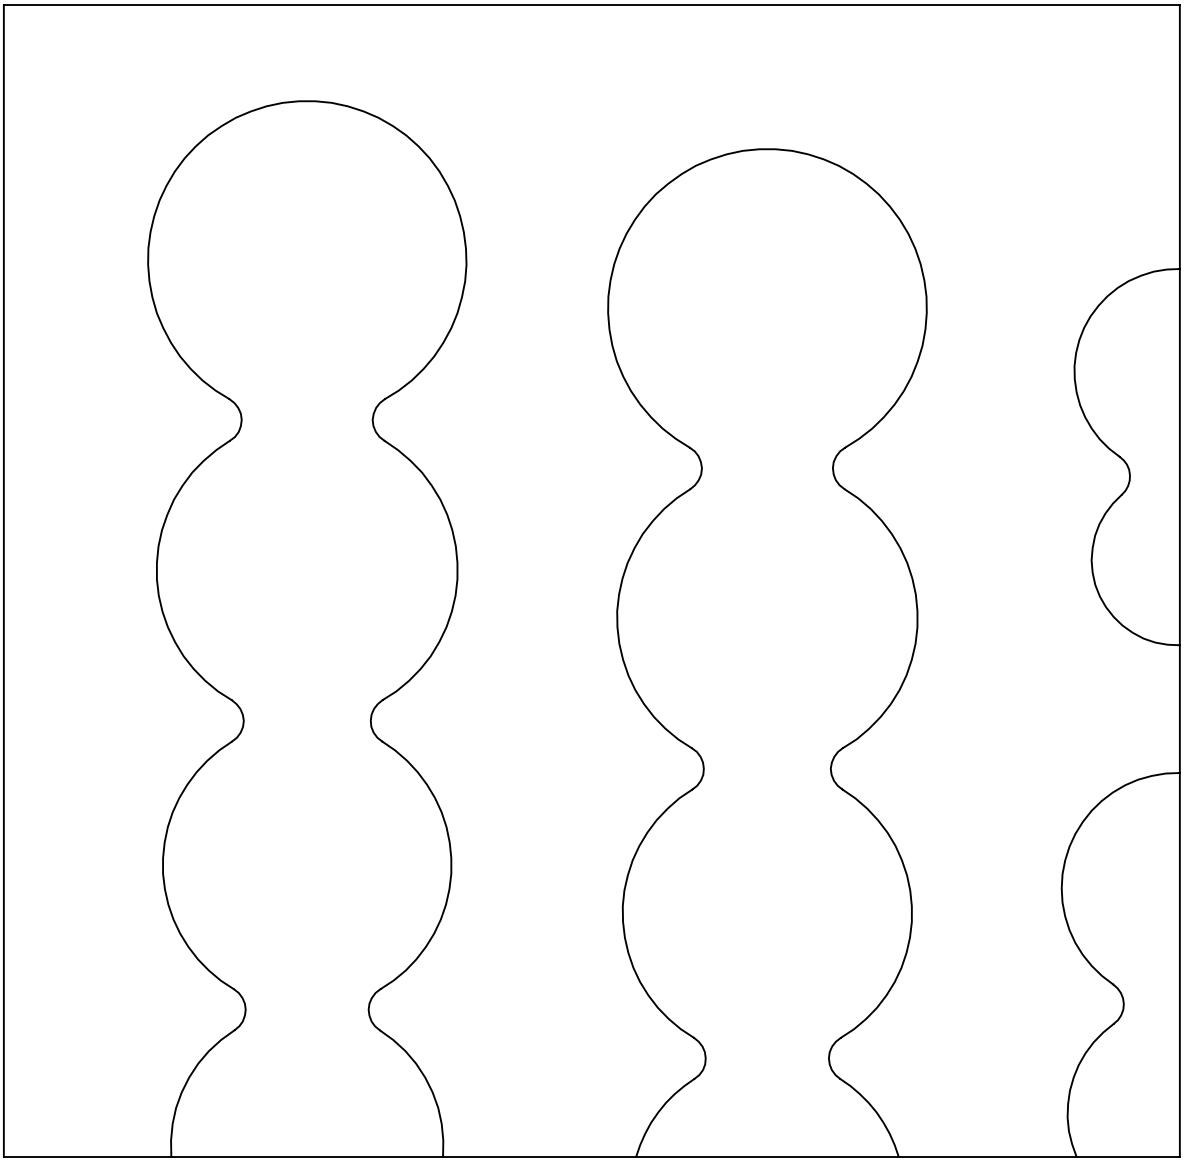

DATE CREATED
24 JUL 2013

PART NUMBER
F1A-00599

Print on Letter at 100%

www.FoamFitTools.com

FoamFit Tools

1.00 IN

1.00 IN

PAGE KEY

X

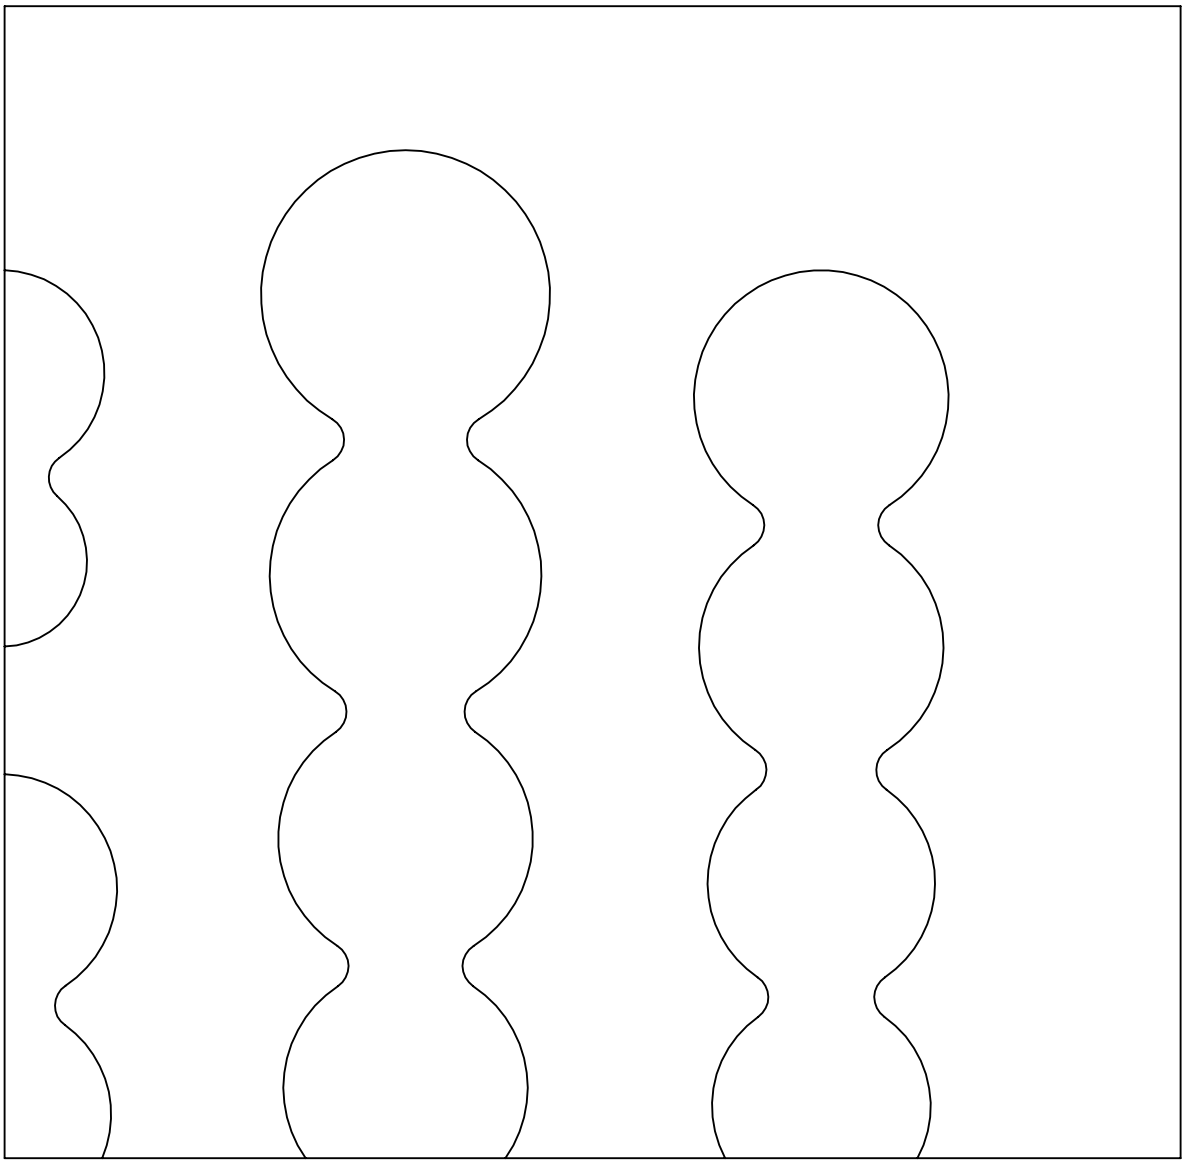

DATE CREATED
24 JUL 2013

PART NUMBER
F1A-00599

Print on Letter at 100%

1.00 IN

1.00 IN

PAGE KEY

X

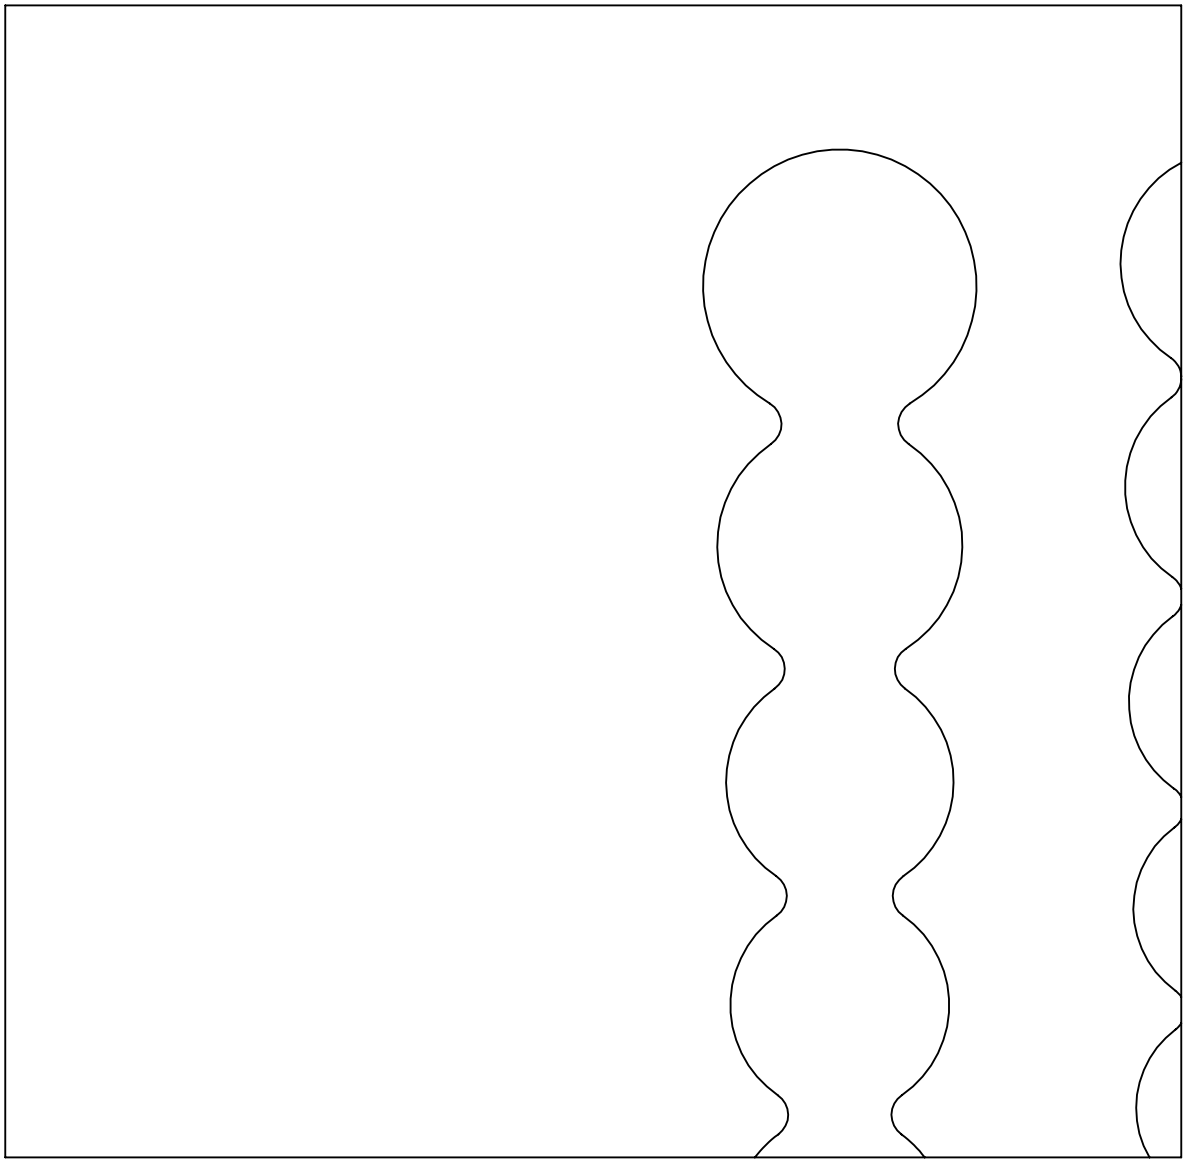

DATE CREATED
24 JUL 2013

PART NUMBER
F1A-00599

Print on Letter at 100%

1.00 IN

1.00 IN

PAGE KEY

X

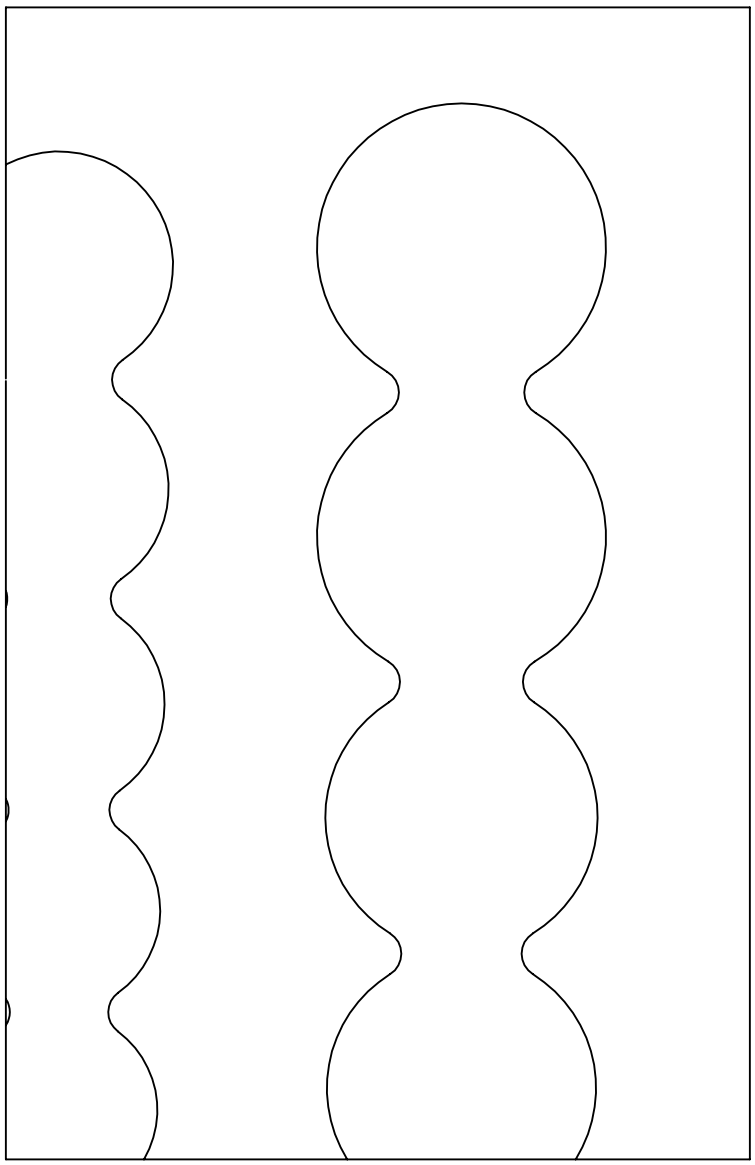

DATE CREATED

24 JUL 2013

PART NUMBER

F1A-00599

Print on Letter at 100%